





Dual Screen - Light, Portable

Written By: Todd Lucas

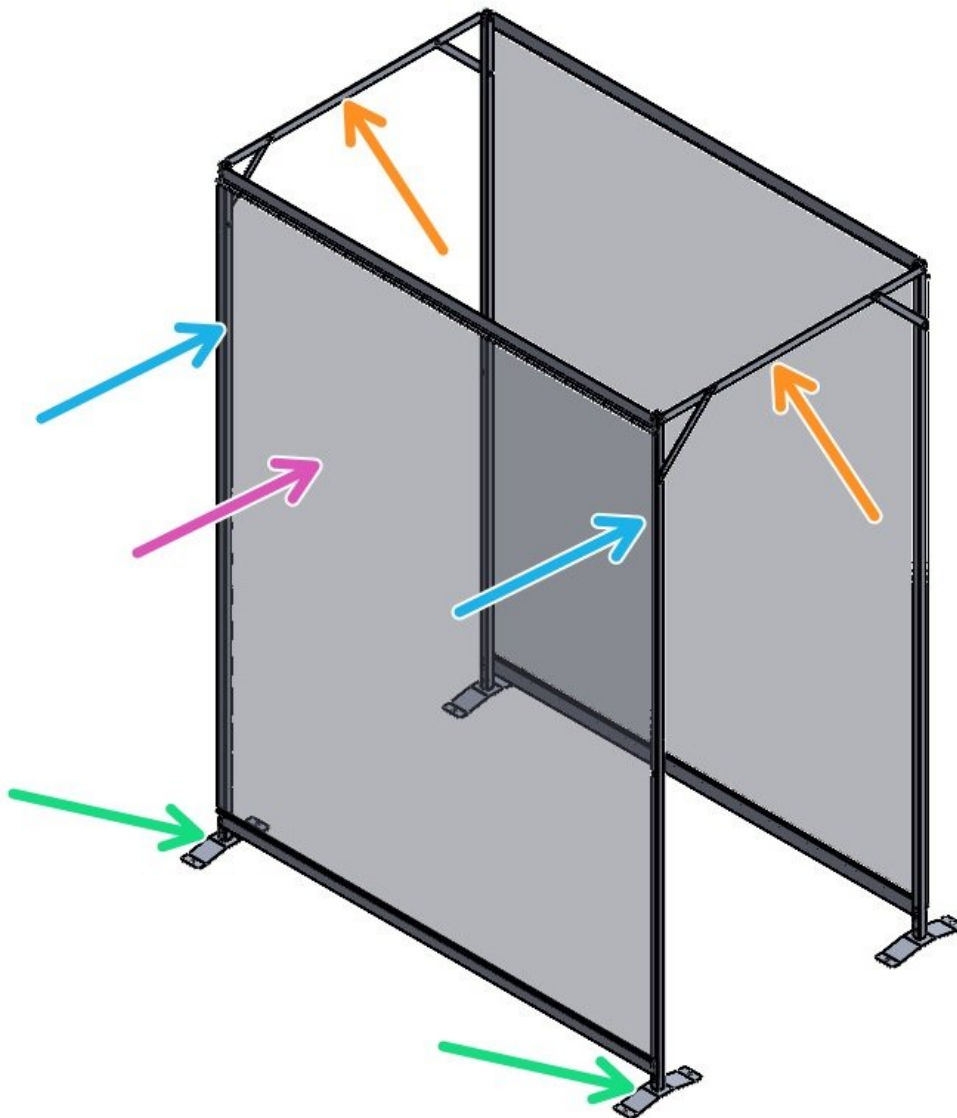


Step 1 — Dual Screen Assembly Overview

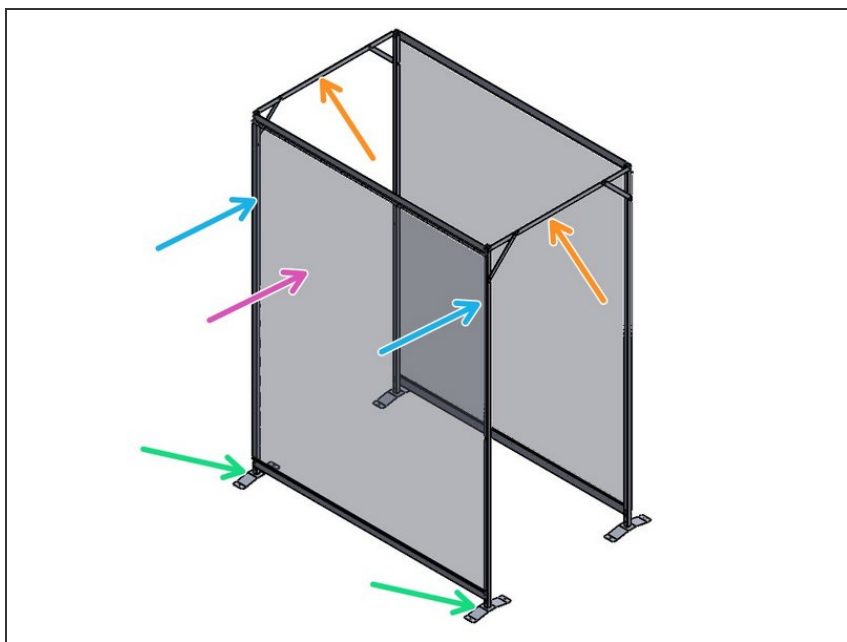


- Assemble a Screen to
- two Posts to create a Screen.
- Install Feet to each Screen to create Standing Screens.
- Install Bracing to tie the Standing Screens together.

Step 2 — Screen Post Assembly - Top

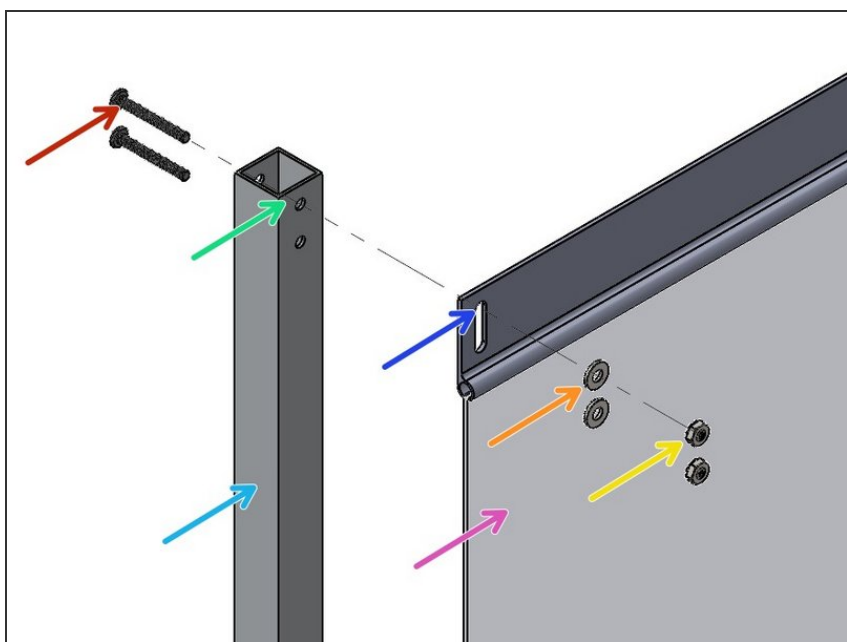


- Lay the Posts on a flat surface.
- Unroll the Screen between the Posts with the Logo facing Up and at the Bottom.
- From the Back Side, insert a Screw
- through the Post
- through the Screen Slot
- through a Washer.
- Secure the pack with a Lock Nut.

Step 3 — Screen Post Assembly - Bottom

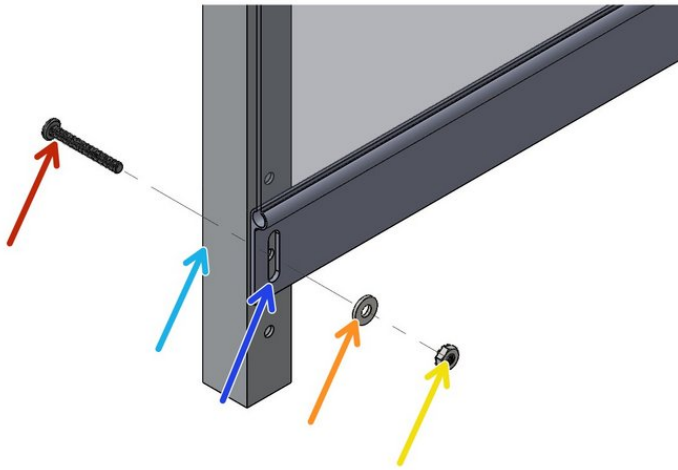


- ❗ The Post Bottom has 4 holes. The Bottom Hole is used for mounting the Foot, and is not used in this step.
- At the Post Bottom, slide a Screw
- through the Post
- in a Hole that aligns with the Slot Bottom on the Screen.
- Slide a Washer onto the Screw.
- Secure the pack with a Lock Nut.
- Repeat the process for the other Post.

Step 4 — Foot Assembly

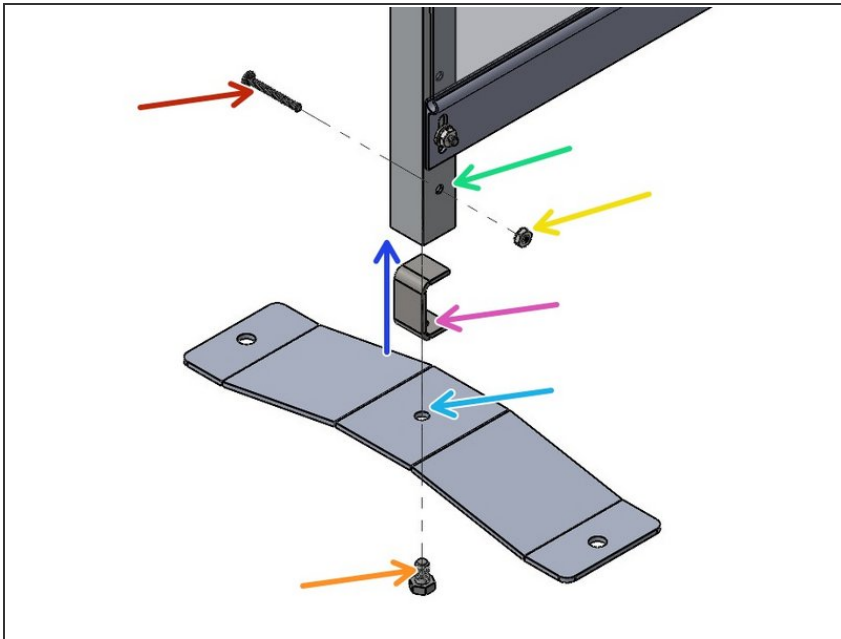


- Orient the Foot to the
- "C" Bracket as shown.
- Secure the 2 parts together with a Hex Screw creating the "Foot Assembly".
- Slide the Foot Assembly into the Post Bottom. The "C" Bracket must be oriented as shown.
- From the Back Side, insert a Screw
- through the Post's Bottom Hole.
- Secure the pack with a Lock Nut.
- Repeat this process for the other Foot.

Step 5 — Sub-Assemble Braces

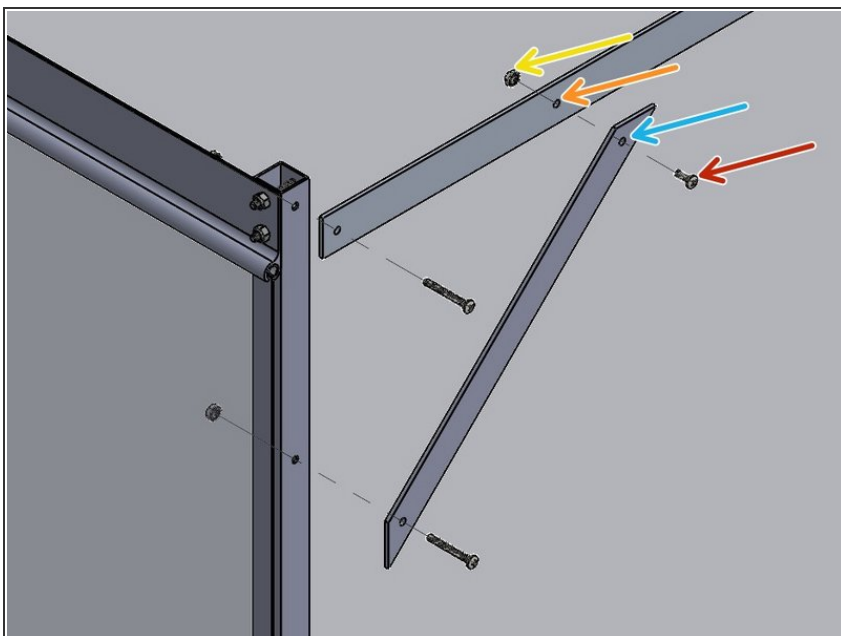


- Insert a Short Screw
- through an Angle Brace Hole. (Orient the Brace as shown.)
- through the Top Brace 2nd Hole.
- Loosely Secure the pack with a Lock Nut.
- Repeat on the other End of the Top Brace.
- Repeat for the other Top Brace.

Step 6 — Install Braces to the Screen Walls

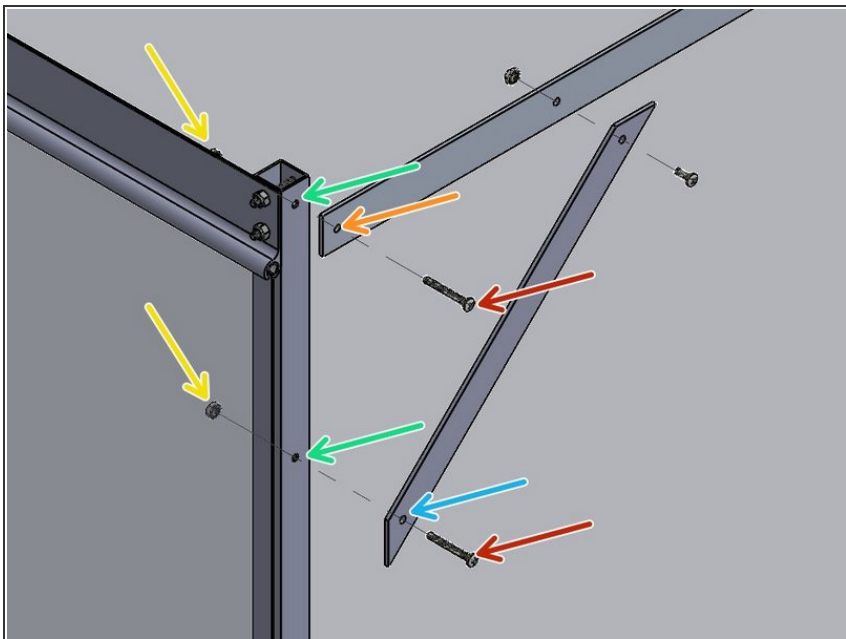

- Insert a Screw
 - through the Top Brace 1st/End Hole.
 - through the Post Top Hole.
- Loosely Secure the pack with a Lock Nut.
- Insert a Screw
 - through the other Angle Brace Hole.
 - through the Post 2nd Hole.
- Loosely Secure the pack with a Lock Nut.

Step 7 — Install the other Screen Wall Braces

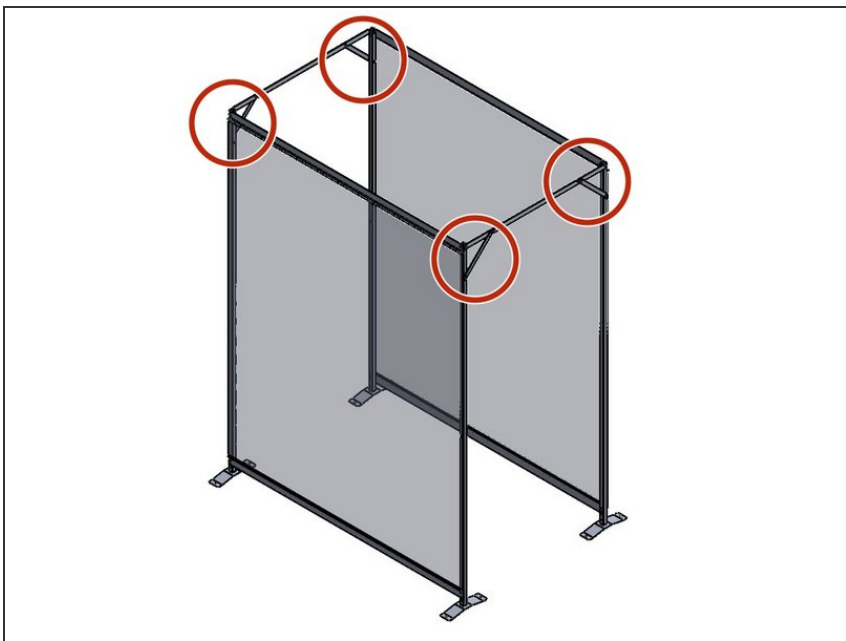

- Repeat the previous step on the other 3 Corners
- Plumb and Square the Screens.
- Fully tighten all of the Bracing Hardware.