



Metal Dock Hood

Metal Dock Shelter Hood Sloped Header

Written By: Mike Bonness



INTRODUCTION

Thank you for ordering a Dock Shelter Metal Hood from Goff’s Enterprises Inc. Please review this guide and follow the steps and tips to ensure proper installation, maximizing the functionality and longevity of your product.

WARNING!!!

READ THIS MANUAL CAREFULLY. INSTALLATION REQUIRES A LADDER AND TWO PEOPLE AT A MINIMUM, OR BY USING A POWERED LIFT. OBSERVE WARNINGS AND PRACTICE CAUTION WHEN INSTALLING, OPERATING, OR MAINTAINING YOUR METAL HOOD. FAILURE TO DO SO COULD RESULT IN SERIOUS INJURY.



TOOLS:

- [Power Drill \(not included\)](#) (1)
- [Wall Anchors \(not included\)](#) (1)
- [1/4in Socket \(not included\)](#) (1)
- [Caulk Gun \(not included\)](#) (1)
- [Silicone Caulking \(not included\)](#) (1)
- [Measuring Tape \(not included\)](#) (1)
- [Marker \(not included\)](#) (1)



PARTS:

- [Left Side Gusset](#) (1)
- [Right Side Gusset](#) (1)
- [Center Gusset](#) (2)
- [Roof Panel](#) (1)
- [Roof Mounting Cleat](#) (1)
- [Self-Tapping Sheet Metal Screw, #8x1/2"](#) (12)
- [Aircraft Cable Kit](#) (2)

Step 1 — Review Product and Warnings

ATTENTION

Thank you for purchasing from Goff's Enterprises, Inc. To ensure maximum functionality and longevity of your product, please carefully review and understand this guide.

SAFETY WARNING

READ THIS MANUAL CAREFULLY. MOST INSTALLATION REQUIRES A LADDER AND TWO PEOPLE AT A MINIMUM. WEAR PROPER SAFETY GEAR AND CLOTHING. OBSERVE WARNINGS AND PRACTICE CAUTION WHEN INSTALLING, OPERATING, OR MAINTAINING YOUR PRODUCT. FAILURE TO DO SO COULD RESULT IN SERIOUS INJURY.


ADDITIONAL SUPPORT

For additional assistance after reviewing this instruction, please reach out to our Technical Support Team using the contact information.

 Technical Support Contacts:



- Phone: 262-746-3374
- Email: techsupport@goffscw.com
- Website:
<http://www.goffsenderprises.com>

Step 2 — Mount Side Gussets

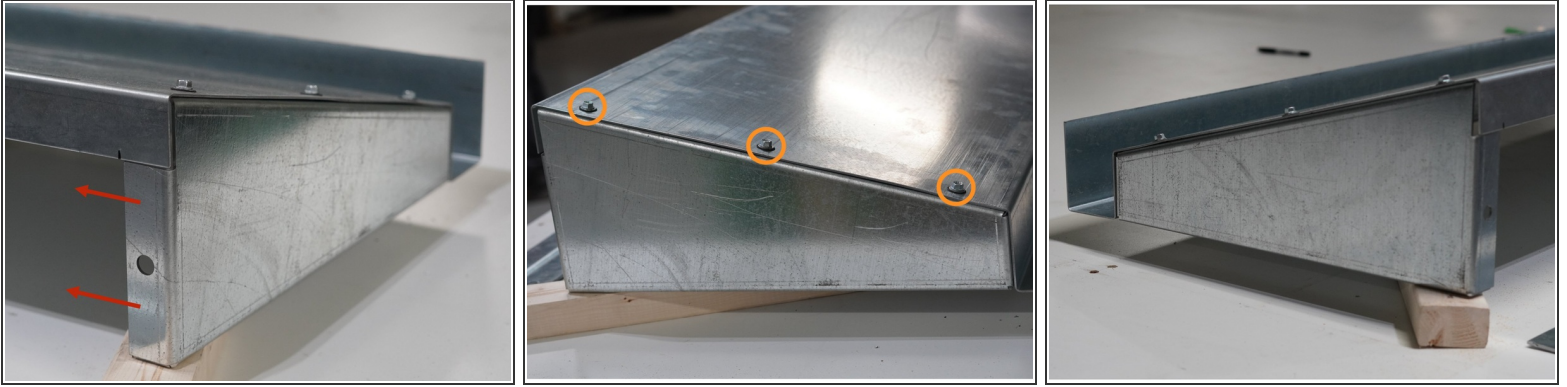


- Orient the Roof Panel with the gutter facing up and line up the Left Side Gusset under the left edge of the Roof Panel.
 - Be sure the mounting flange is facing towards the center of the Roof Panel and the top pre-drilled holes are aligned with the Gusset and the Roof Panel.
 - Once the Left Side Gusset is aligned properly, secure it by fastening the (3) provided self-tapping screws through the Roof Panel into the Gusset.
 - Repeat this for the Right Side Gusset.
- ❗ It may help to prop the unit up on 2x4 planks.

Step 3 — Mount Center Gussets

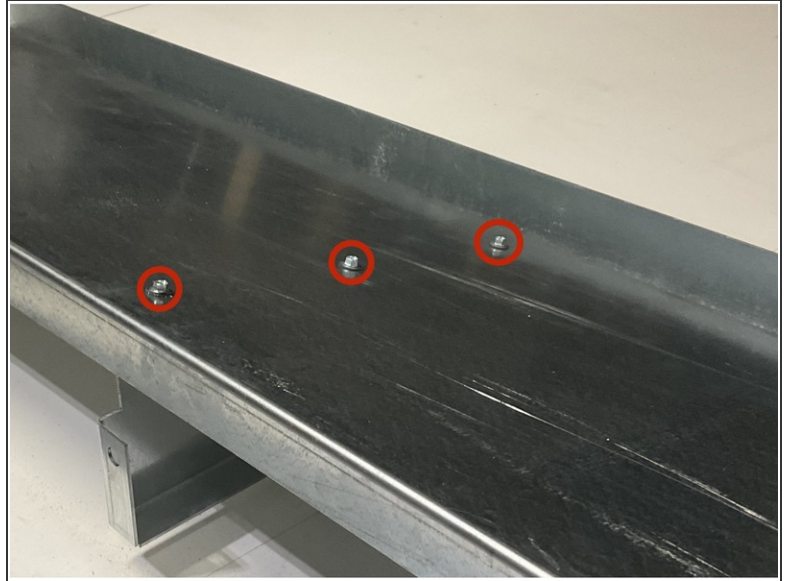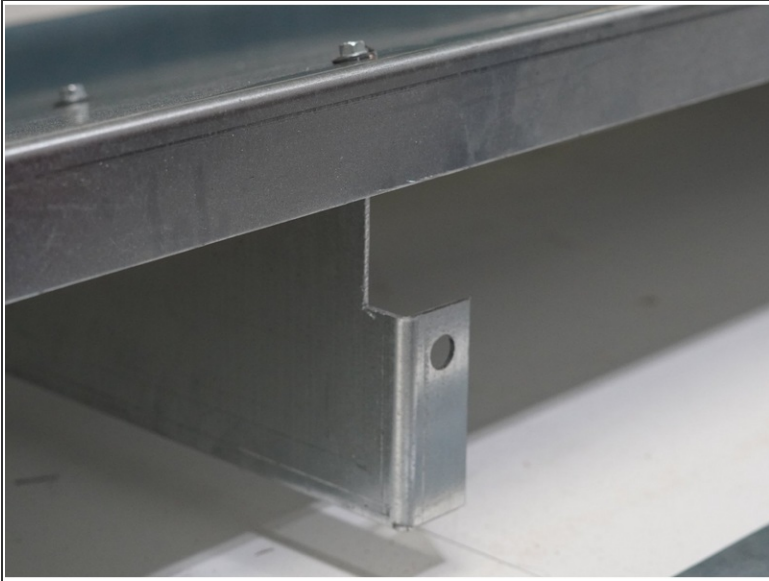

- ① The Center Gussets will have slightly larger notches to make installation of the Roof onto the Mounting Cleat easier.
- Line up the (2) Center Gussets with the pre-drilled holes in the Roof Panel.
- Secure the Center Gussets by fastening the (3) provided self-tapping screws through the Roof Panel into the Gusset.

Step 4 — Mount The Cleat to The Wall

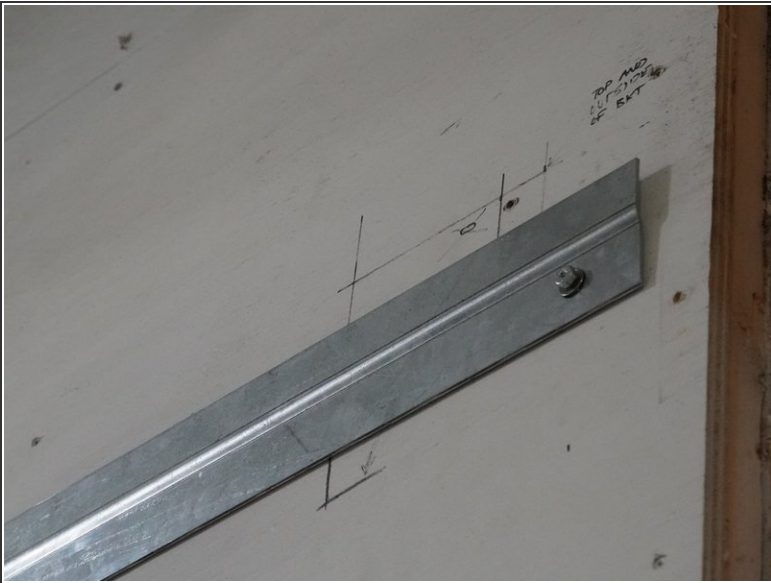

Unit Projection - Back of Roof to Front of Gutter	Cleat Offset Distance
18"	3.000"
24"	4.625"
36"	7.875"

Unit Projection - Back of Roof to Back of Gutter	Cleat Offset Distance
30"	7.000"
38"	9.250"

- Measure the Roof Mounting Cleat width and the opening width and mark the center lines for reference to ensure The Metal Roof is mounted centered to the opening.
- ⚠ The unit projection determines the height offset distance for the Roof Mounting Cleat.
- Measure the Unit Projection, and reference the table to determine the height offset from the top of the door opening to the bottom of the Roof Mounting Cleat.
- Orient the Roof Mounting Cleat centered on the wall with the bend in the Roof Mounting Cleat facing up and away from the wall as shown. Make sure the Roof Mounting Cleat is level and that the bottom edge of the Roof Mounting Cleat is the correct offset dimension above the opening using the Cleat Offset Distance Table.
- Once you have the Roof Mounting Cleat located properly, using best practices for your surface material, anchor the cleat in place using the (5) pilot holes.

Step 5 — Hang the Metal Roof



- Using a Fork Lift or some other source for lifting the roof up, gently hang the Roof assembly by interlocking the back lip of the Roof onto the Roof Mounting Cleat.
- Be sure that the back edge of the Roof Assembly is fully seated along the entire span of the Roof Mounting Cleat.
- There is some wiggle room left to right to adjust and make sure your roof is centered on the opening before fully securing the Roof Assembly to the mounting surface.

Step 6 — Secure Roof to Mounting Surface



- Once the Roof Assembly is in the desired location, using best practices for your surface material, anchor the (4) Gussets into the mounting surface.

Step 7 — Support Roof With Cable Ties



- Locate the provided Aircraft Cable Kits.
 - Fasten one end of the Aircraft Cable to the inside of the gutter by taking the Bolt and Washer through the pre-drilled hole on the inside face of the gutter located roughly 12" from each end and attach the nut on the backside.
 - Secure the other side of the aircraft cable using best practices for your surface material to anchor the cable to the mounting surface.
- ⚠ Be sure the cables are taut and helping support the Roof Assembly.
- Repeat for the other side.

Step 8 — Caulk Gaps

- Once The Roof Assembly is installed, be sure to caulk anywhere that you can see daylight.
- ① Pay extra attention to the gaps between the back edge of The Roof Assembly and the mounting surface.