



Integrated Weather Wall - Foam Sided Shelter

Weather Wall Integrated Integration Dock Shelter

Written By: Mike Bonness



INTRODUCTION

Thank you for ordering a Foam Sided Shelter integrated with a Weather Wall from Goff’s Enterprises Inc. Please review this guide and follow the steps and tips to ensure proper installation, maximizing the functionality and longevity of your product.

WARNING!!!

READ THIS MANUAL CAREFULLY. INSTALLATION REQUIRES A LADDER AND TWO PEOPLE AT A MINIMUM, OR BY USING A POWERED LIFT. OBSERVE WARNINGS AND PRACTICE CAUTION WHEN INSTALLING, OPERATING, OR MAINTAINING YOUR METAL HOOD. FAILURE TO DO SO COULD RESULT IN SERIOUS INJURY.



TOOLS:

- [Power Drill \(not included\)](#) (1)
- [Wall Anchors \(not included\)](#) (1)
- [Caulk Gun \(not included\)](#) (1)
- [Silicone Caulking \(not included\)](#) (1)
- [Measuring Tape \(not included\)](#) (1)
- [Marker \(not included\)](#) (1)



PARTS:

- [Head Frame Assembly](#) (1)
- [Foam Side Member](#) (2)
- [Weather Wall Pad](#) (1)
- [Top Face Curtain](#) (1)
- [Left Side Face Curtain](#) (1)
- [Draft Pad Set](#) (1)
- [Right Side Face Curtain](#) (1)
- [Left Head Frame Bracket](#) (1)
- [Right Head Frame Bracket](#) (1)
- [Header Angle Trim](#) (1)
- [Mounting Bracket Kit](#) (1)

Step 1 — Review Product and Warnings

ATTENTION

Thank you for purchasing from Goff's Enterprises, Inc. To ensure maximum functionality and longevity of your product, please carefully review and understand this guide.

SAFETY WARNING

READ THIS MANUAL CAREFULLY. MOST INSTALLATION REQUIRES A LADDER AND TWO PEOPLE AT A MINIMUM. WEAR PROPER SAFETY GEAR AND CLOTHING. OBSERVE WARNINGS AND PRACTICE CAUTION WHEN INSTALLING, OPERATING, OR MAINTAINING YOUR PRODUCT. FAILURE TO DO SO COULD RESULT IN SERIOUS INJURY.


ADDITIONAL SUPPORT

For additional assistance after reviewing this instruction, please reach out to our Technical Support Team using the contact information.

- i


Technical Support Contacts:
- Phone: 262-746-3374
 - Email: techsupport@goffscw.com
 - Website:
<http://www.goffsenderprises.com>

Step 2 — Measure Head Frame Width

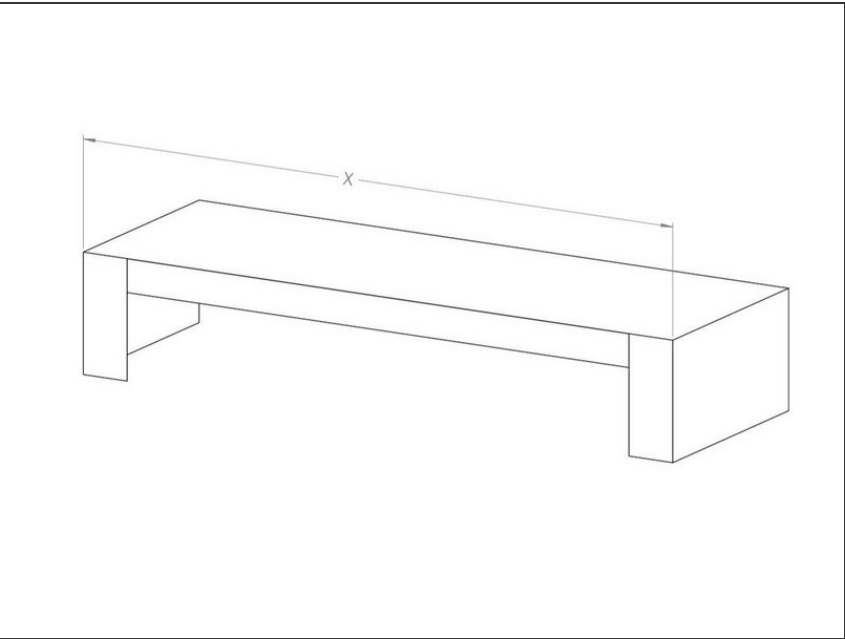


- Measure Roof Frame width from outside edge to edge and take note.

Step 3 — Mark Side Pad Locations On Building

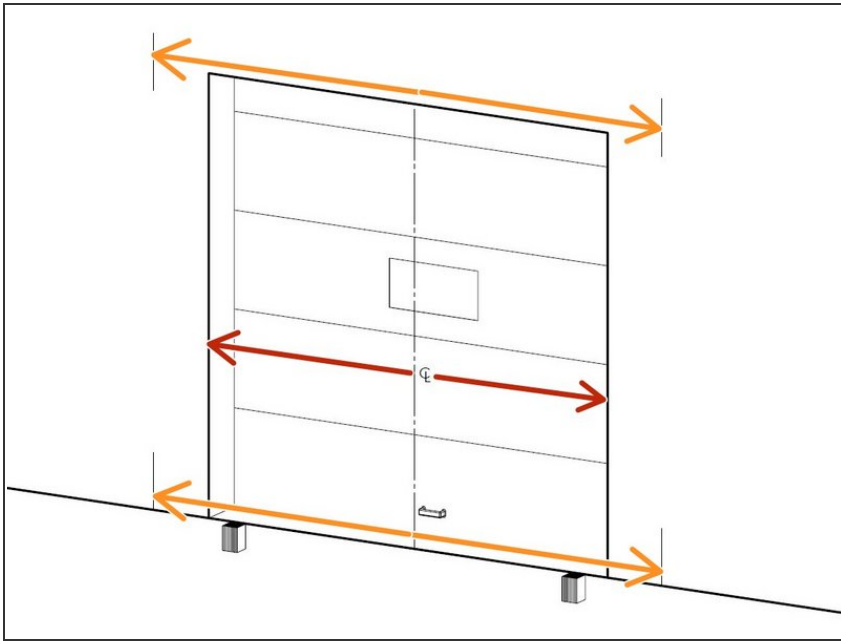

- Measure the door width and divide that number by 2 to determine the centerline of the door opening.
 - Take the Head Frame width from the previous step and divide that by 2 to determine the Side Pad offset from the door opening centerline.
 - Using the Side Pad offset dimension, mark lines from the centerline of the door opening to each side of the door opening.
 - Make a mark towards the top and bottom of each side of the door opening to help ensure the Side Pads are plumb.
- ⓘ These marks will be used in a later step to align the outside edges of the Side Pads.


Step 4 — Mount The Side Pads

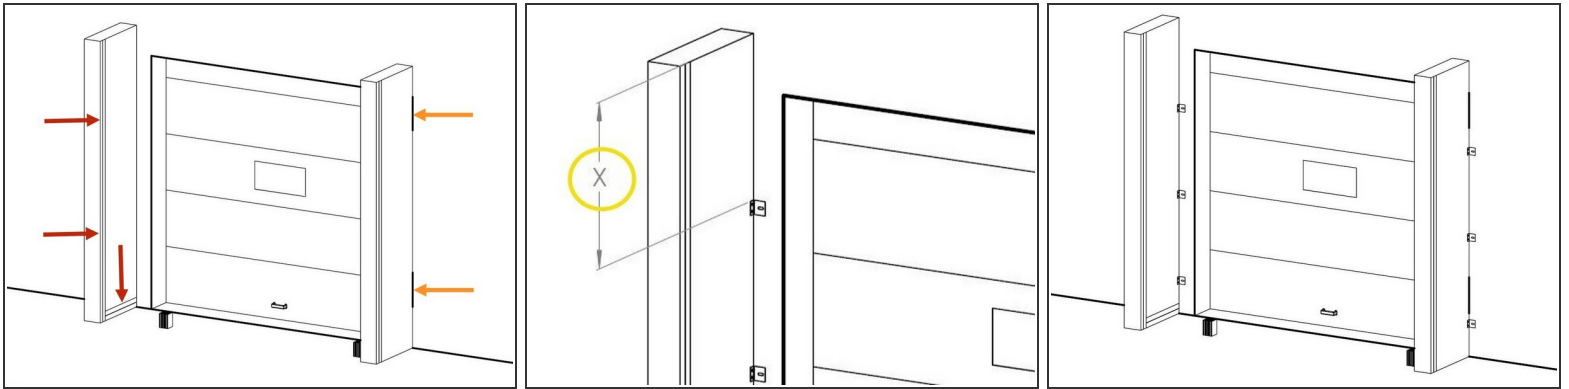

① Identify the Left and Right Side Pads


- The front of the pad will have (2) strips of Velcro running up the length just on the inside of the left and right faces, and the Inside face will have (2) strips of Velcro to attach the Draft Pads towards the bottom of the Side Pad.
- Once you have the Left and Right Pads identified, line them up so the outside faces are flush with the marks made on the wall in the previous step to make sure the whole Side Pad is plumb.
- Measure the length of your Header Brackets and add 2" to that number to get your top Mounting Bracket dimension X.
- Fasten the Side Pads to the wall using the Angle Brackets on the outside face by fastening (2) of the provided Hex Head Screws into the backer of the Side Pad and using an anchor to attach to the mounting surface. Fasten brackets X" from the top, 12" from the bottom, and one centered in the pad.
- Fasten 3 more brackets on the inside face of the pad in the same locations as above. You will be provided either Angle, Offset, or Flat brackets for the inside face installation based on the Door Opening Width.

Step 5 — Attach Left/Right Face Curtains

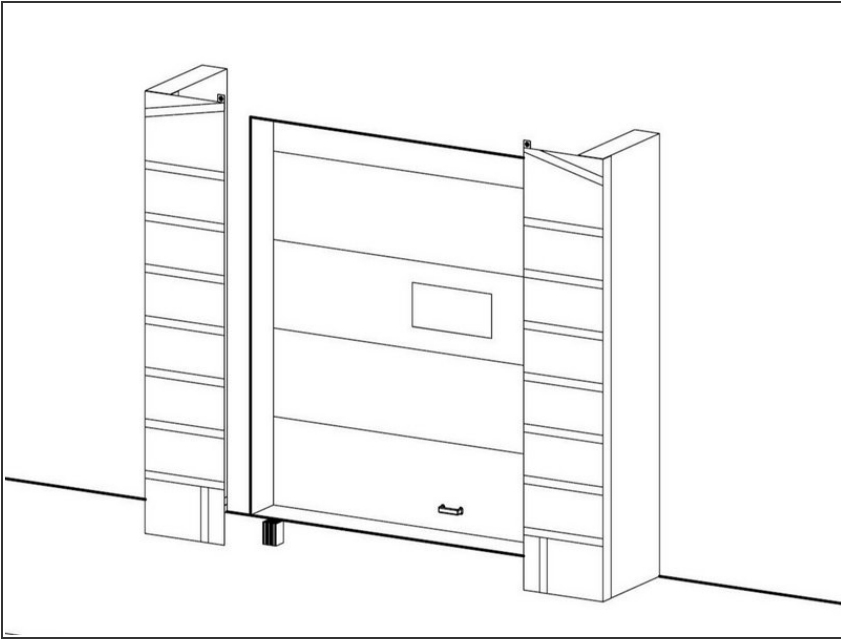


- Attach the Left and Right Face Curtains by lining up the Velcro Strips towards the front of the Side Pad On the left and right faces with the Velcro Strips on the back of the Side Curtains.

Step 6 — Attach Draft Pads

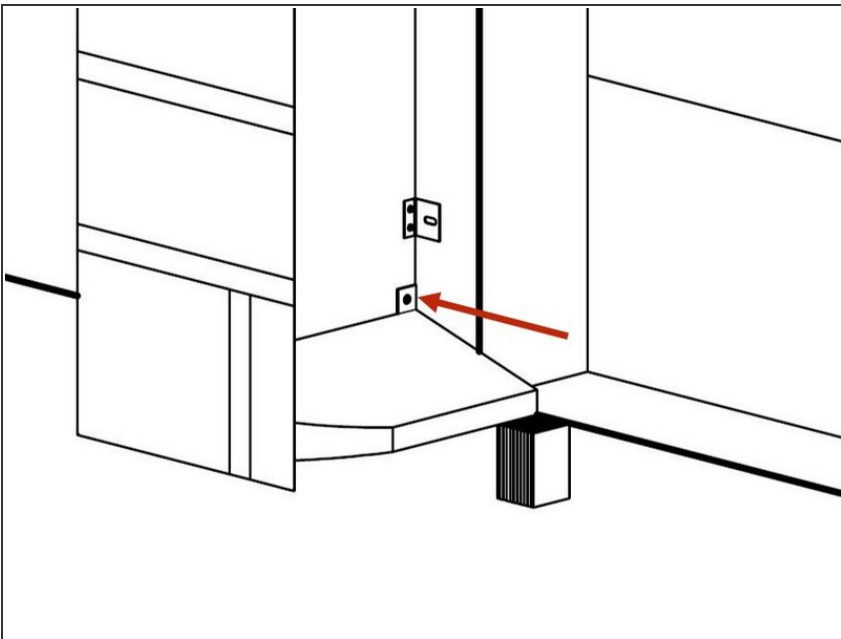


- Attach Draft Pads by lining up the Velcro on the back of the Draft Pad with the Velcro on the bottom of the Side Pad.
- Secure the Draft Pad by fastening a provided Hex Head Bolt through the Grommet Tab of the Draft Pad into the Backer of the Side Pad.

Step 7 — Attach Header Brackets

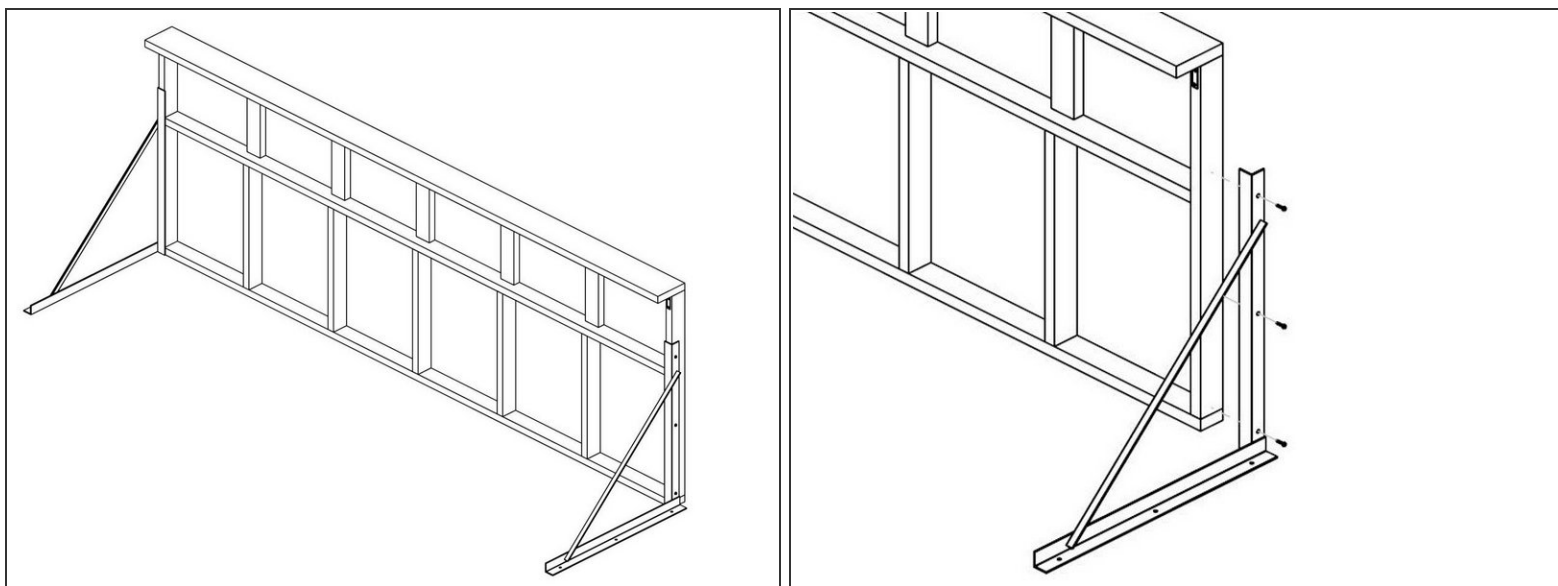



- ① Head Frame Cover is hidden to show detail.
- ① Note that the 2x8 Board is the front of the unit, and the Header Brackets should be flush with the 2x4 Board on the back of the unit.
- Orient Header Brackets onto the Head Frame as shown.
- Fasten the Header Brackets to the Head Frame using the supplied Hex Head Screws.

Step 8 — Line Up Wiper Pad With Head Frame

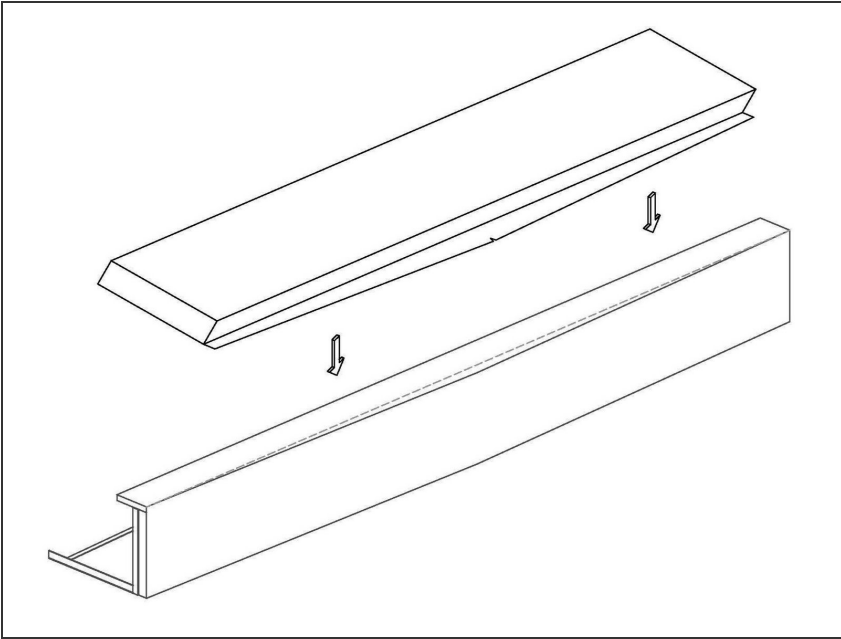



- Place the wiper pad on the face plate of the head frame. Center the Pad on the Front 2x8 Board with the top corners of wiper pad flush with top of the Head Frame.

Step 9 — Attach Wiper Pad

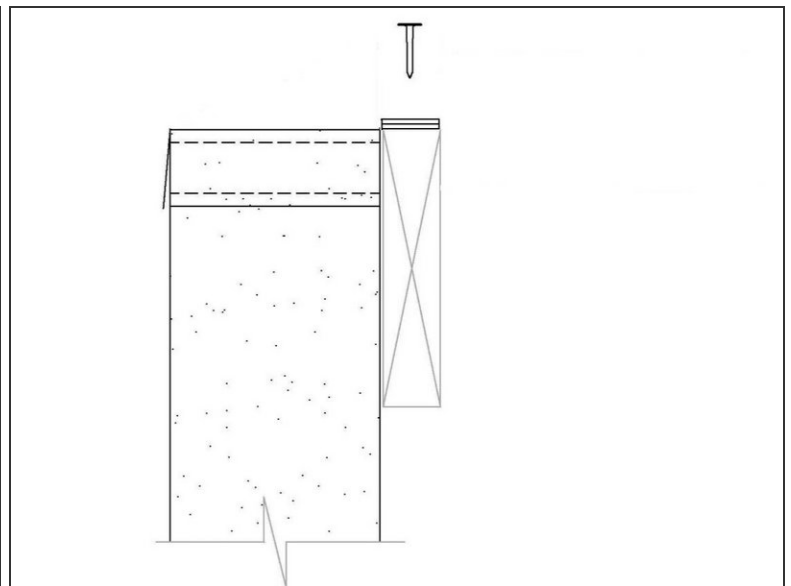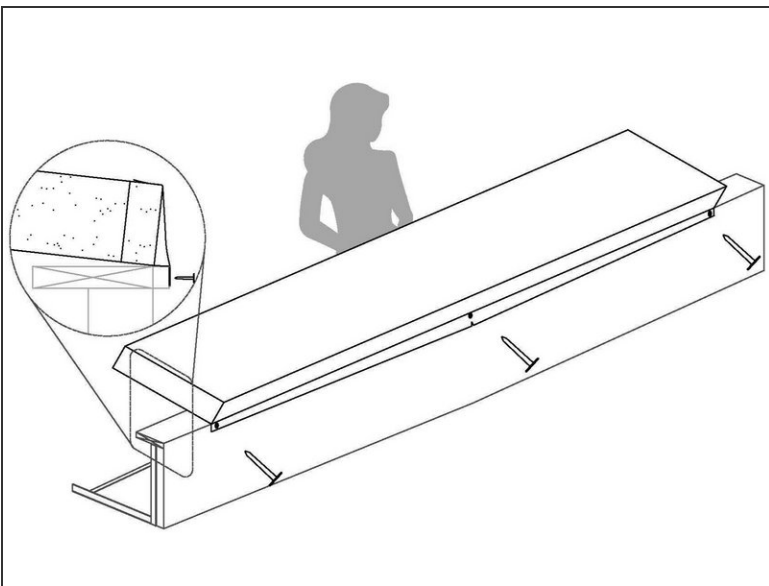


- Lay attachment flap down & fasten in place with (3) flat head roofing nails to temporarily secure Wiper Pad.

Step 10 — Secure Wiper Pad

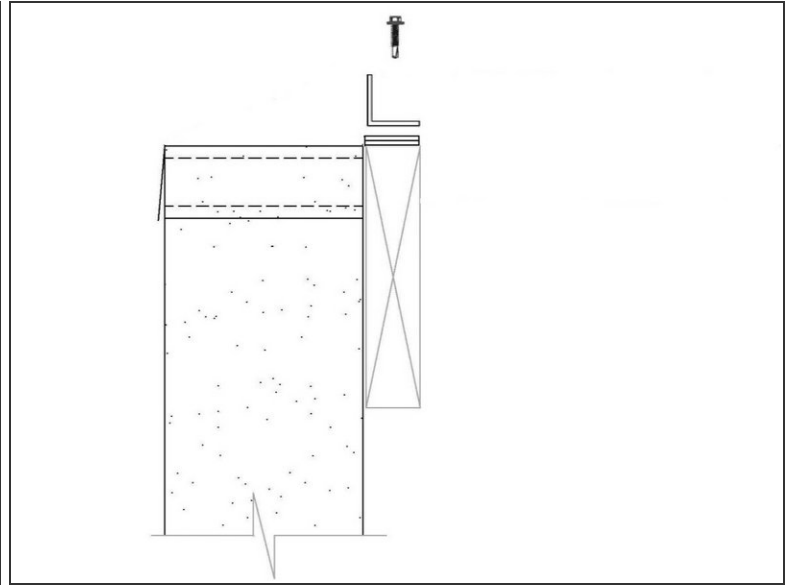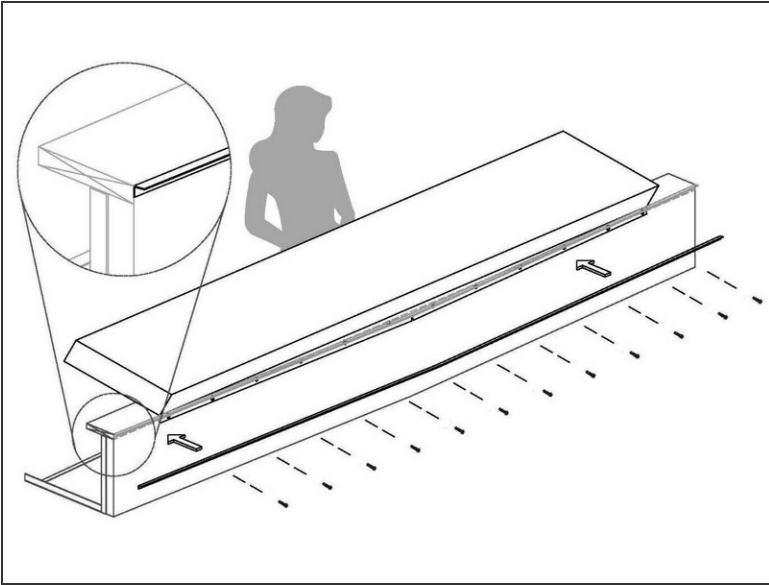

- Place Aluminum Angle Trim over Attachment Flap and fasten with provided Hex Head Screws fastening every 11"-12".


Step 11 — Mount Header

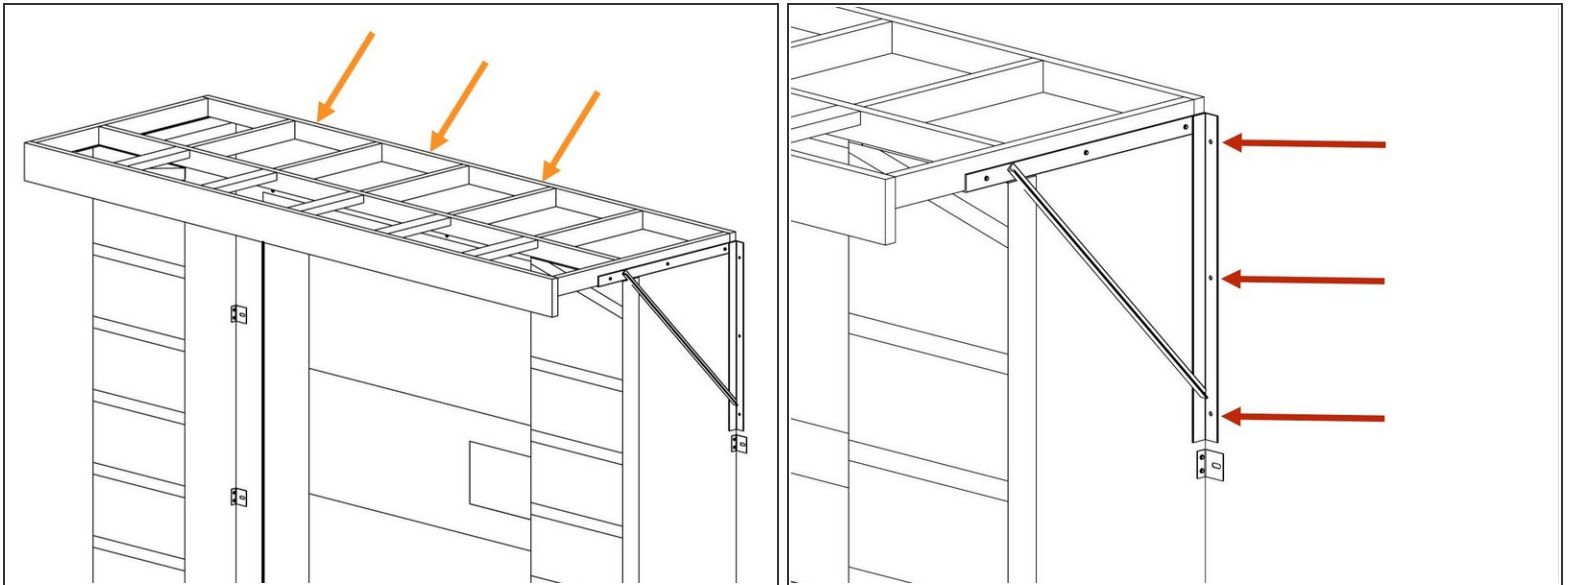

① Wiper Pad and Head Frame Cover hidden to show detail.

- Align the Head Frame Assembly so that The Header Brackets are on the outside of the Side Pads, and Flush against the mounting surface.
- Anchor Head Frame Supports to the mounting surface using concrete anchors or by using other best practices using the (3) pilot holes in the Bracket.
- Secure Head Frame to the mounting surface by drilling through the back 2x4 using at least (3) concrete anchors, or by using other best mounting practices.


Step 12 — Mount Top Face Curtain

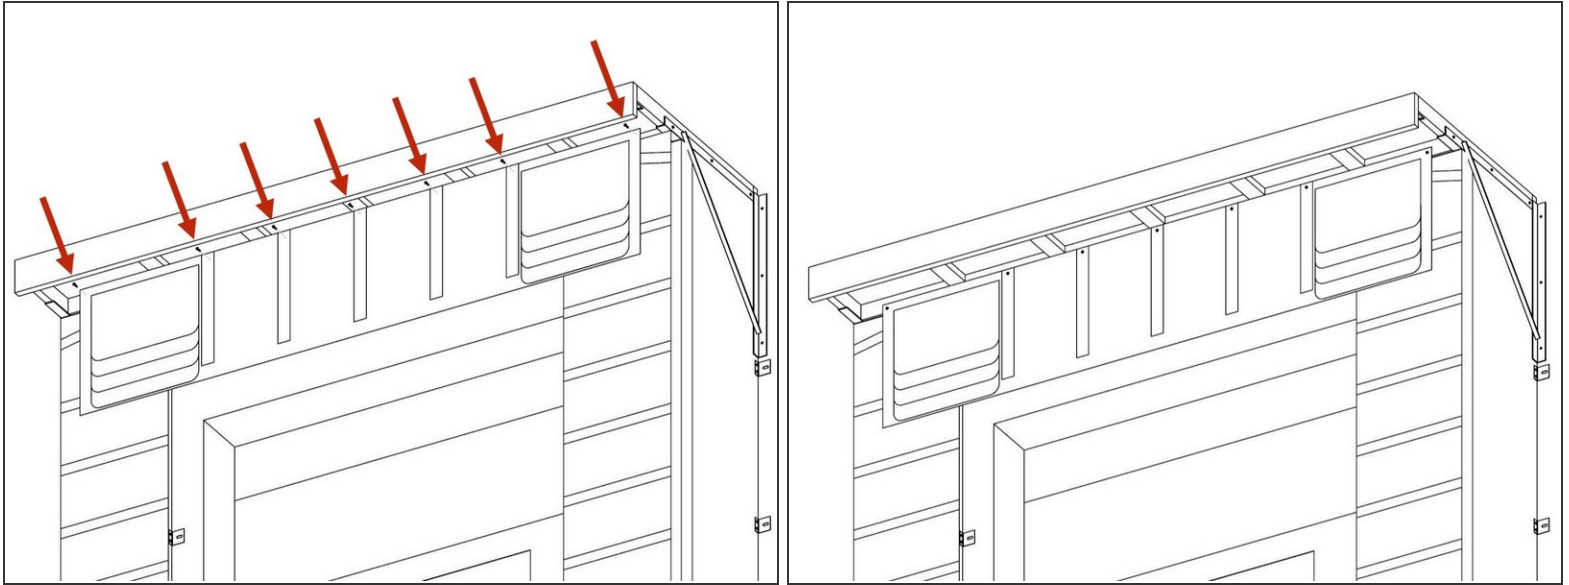

❗ Wiper Pad and Head Frame Cover hidden to show detail.


- Center The Top Face Curtain and fasten it to the Center Horizontal Beam on The Head Frame all the way butted up to the top of the Cross Beams on The Head Frame using the provided Hex Head Screws.
- Use a fastener through the top of each Stiffener in the Top Face Curtain and one on each end as shown.

Step 13 — Mount Aircraft Cable Kits

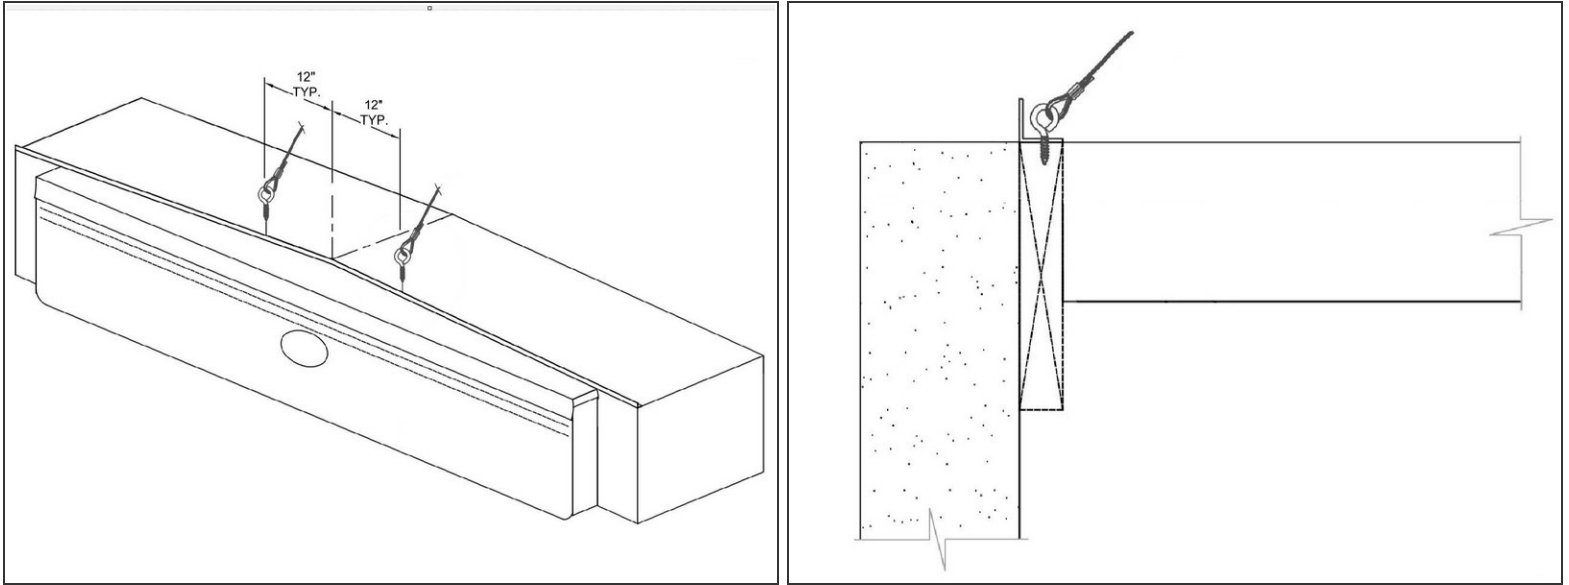

- Install two Eye Screws with the Aircraft Cable through the Angle Trim and into the Head Frame 12" off center.
- Secure the other side of the aircraft cable using best practices for your surface material to anchor the cable to the mounting surface.

Step 14 — Caulk Gaps

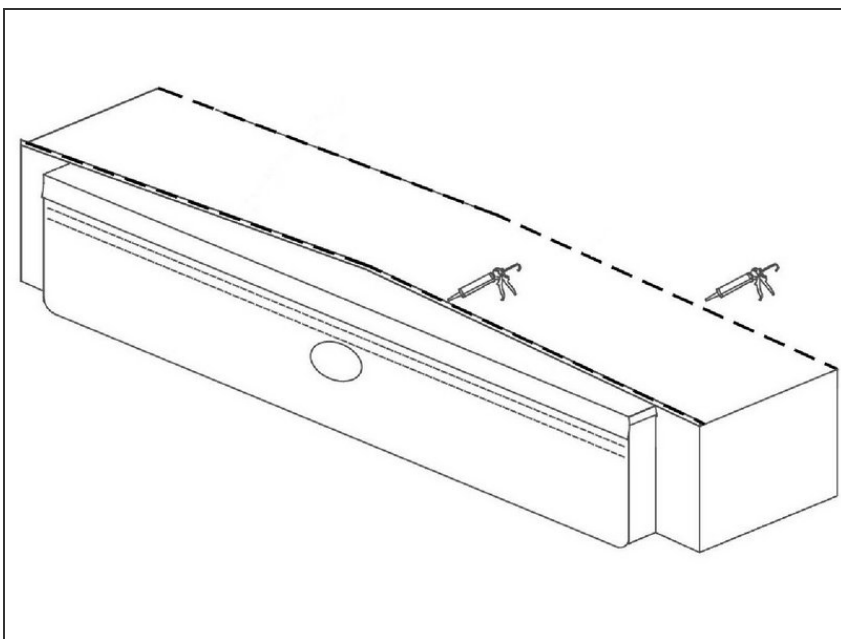

- Once The Roof Assembly is installed, be sure to caulk anywhere that you can see daylight.
- ① Pay extra attention to the gaps between the back edge of The Roof Assembly and the mounting surface.

Step 15 — Attach Bungees

- Attach Bungees from the Grommet Tabs in the top of the Left and Right Face Curtains to the Eye Bolts in the Head Frame.
- Crimp the ends of the bungees to keep them from coming loose.