

Assemble Projection Mount Tracks

Written By: Trent Borgardt

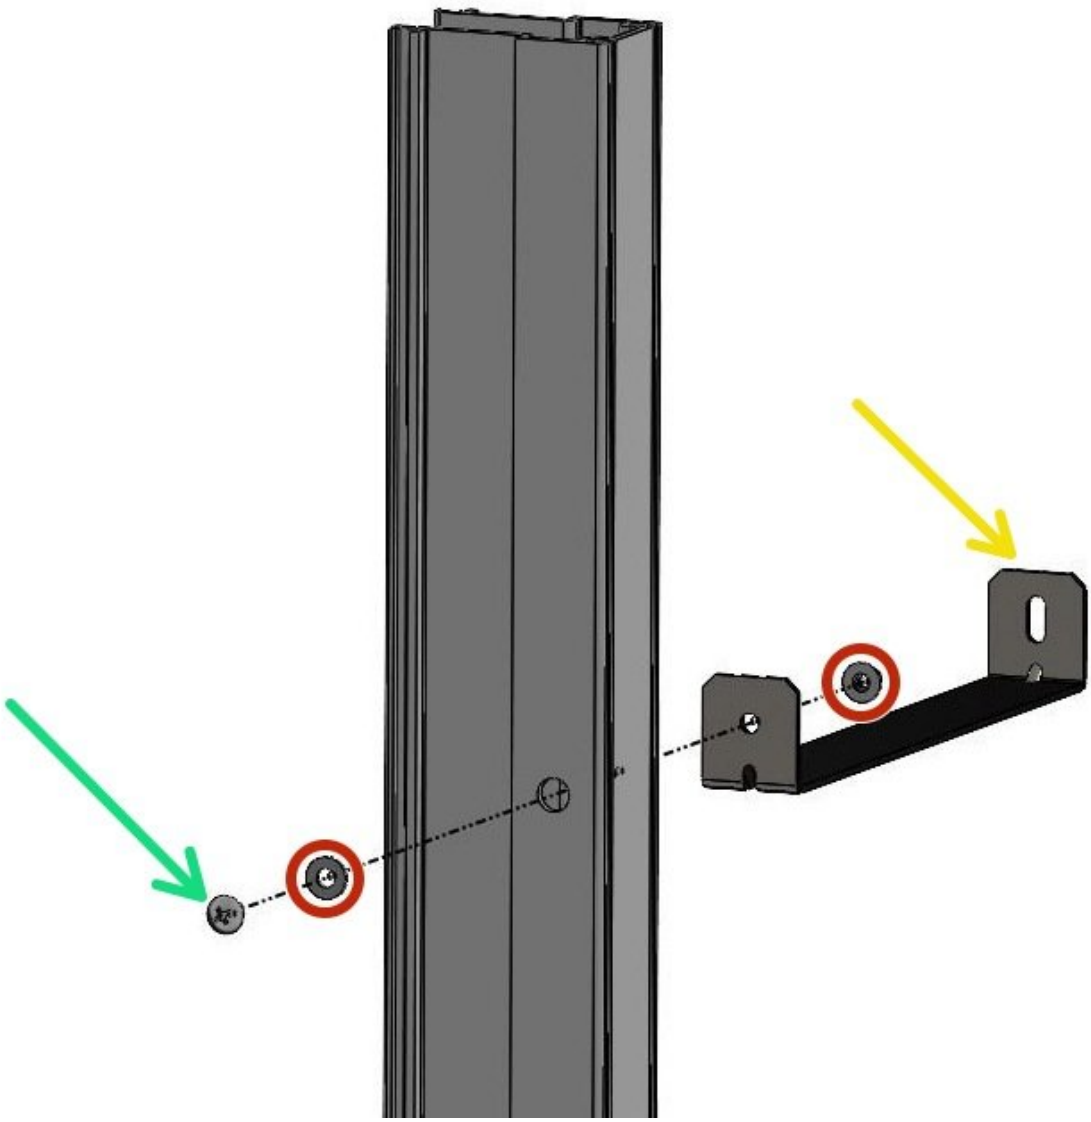



Step 1 — Assemble Projection Mount Tracks

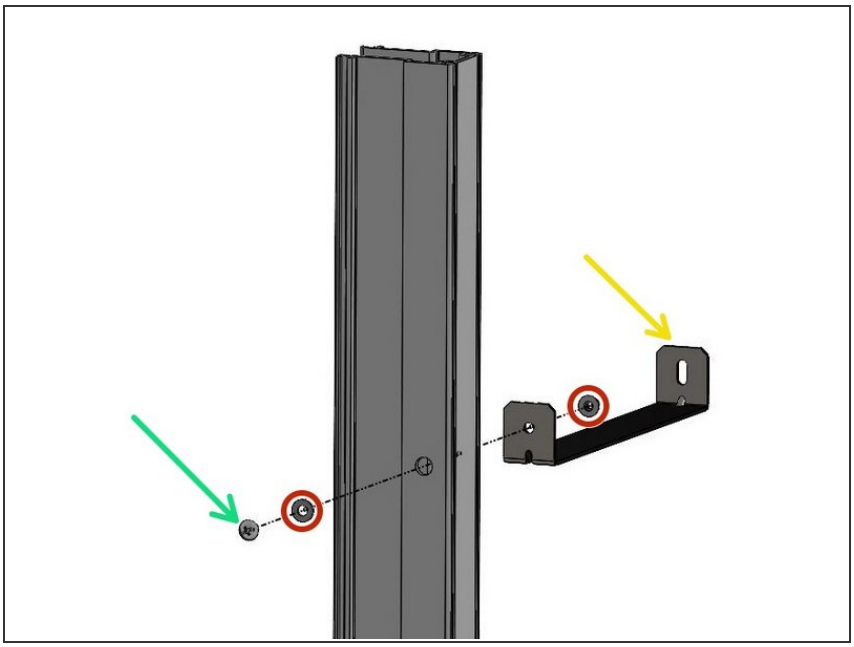

- ⓘ Tracks are marked for orientation as Left Side, and Right Side.
- Lay the two Vertical Track Assemblies on your work surface.
- Un-roll the Side Seal material.
- Remove the Plugs from the front of the Track
- Locate the Track Projection Mount Brackets, four (4) per Track.
- Locate four the ¼-20 Screws and Flanged Nuts.

Step 2 — Assemble Projection Mount Tracks

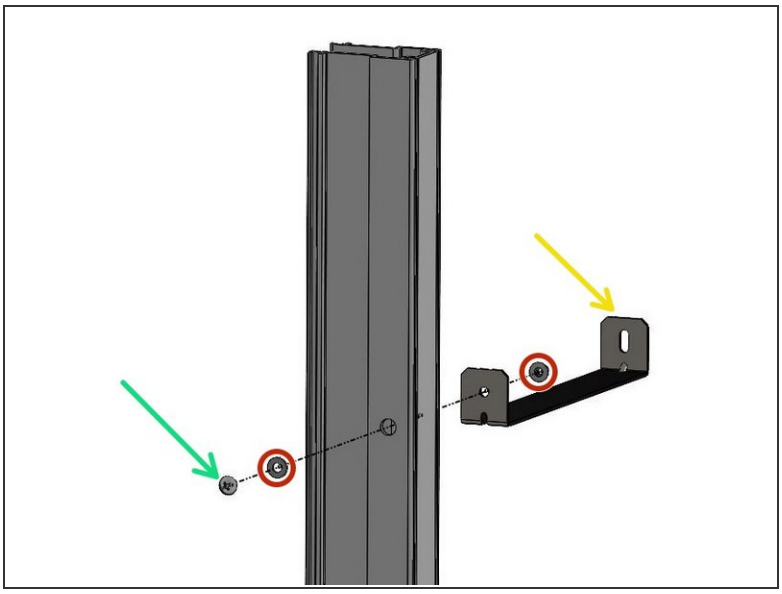

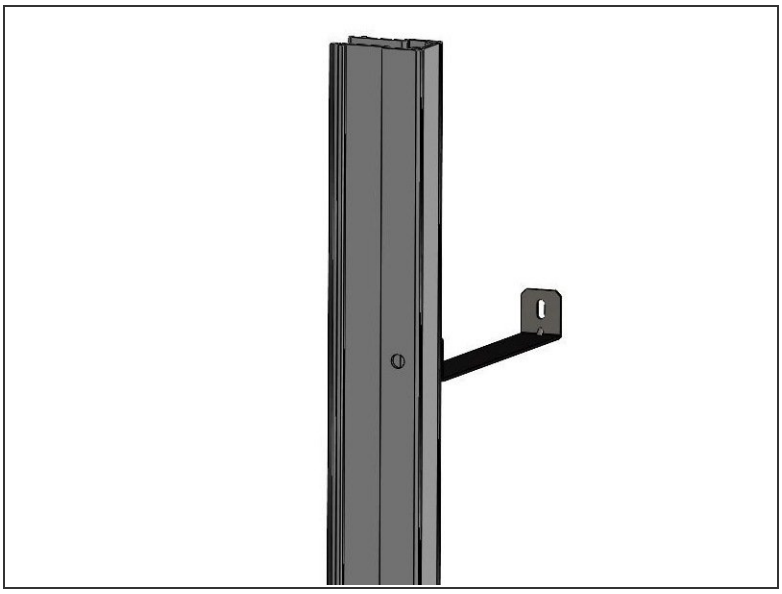

- Push a screw through the hole in the back surface from the inside of the Track.
- Slip the Projection Bracket onto the 1/4-20 Screw, with the hole facing the Track, and then thread the nut, onto the screw.
- ⓘ The slotted end of the Projection Bracket will fasten to the Mounting Surface in a later step.
- ⓘ These Brackets should be Mounted so that their Flanges point Vertically (as shown).
- Fully tighten the hardware for these brackets once they are aligned with the Track edges.
- Re-install the Plug Caps into the hardware access holes on the front side of the Tracks.