

Measure G1 Standard Door Header Width

Written By: Todd Lucas

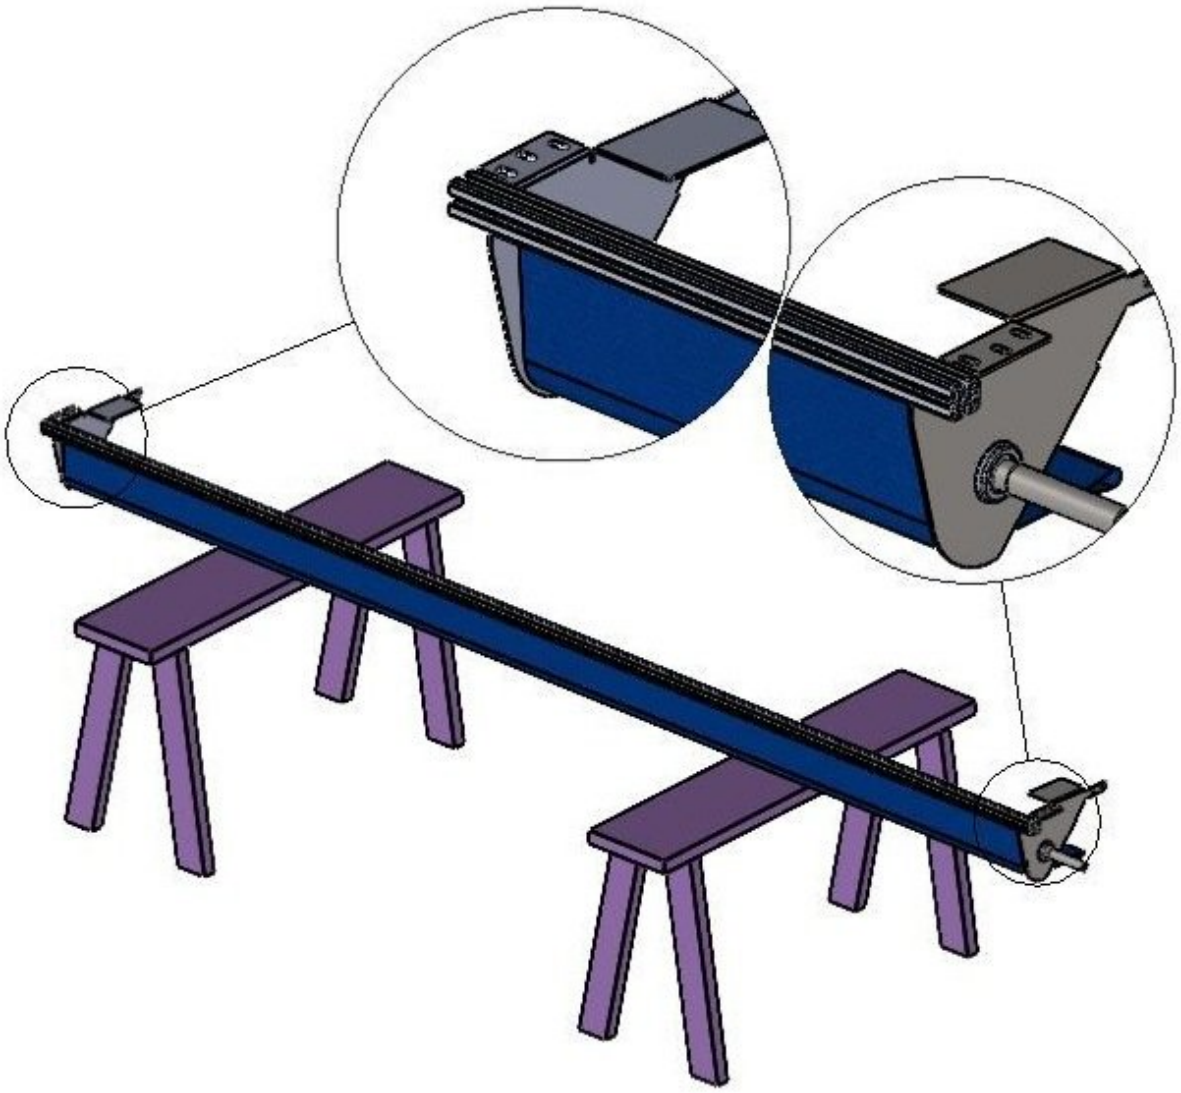

Step 1 — Measure Header Width

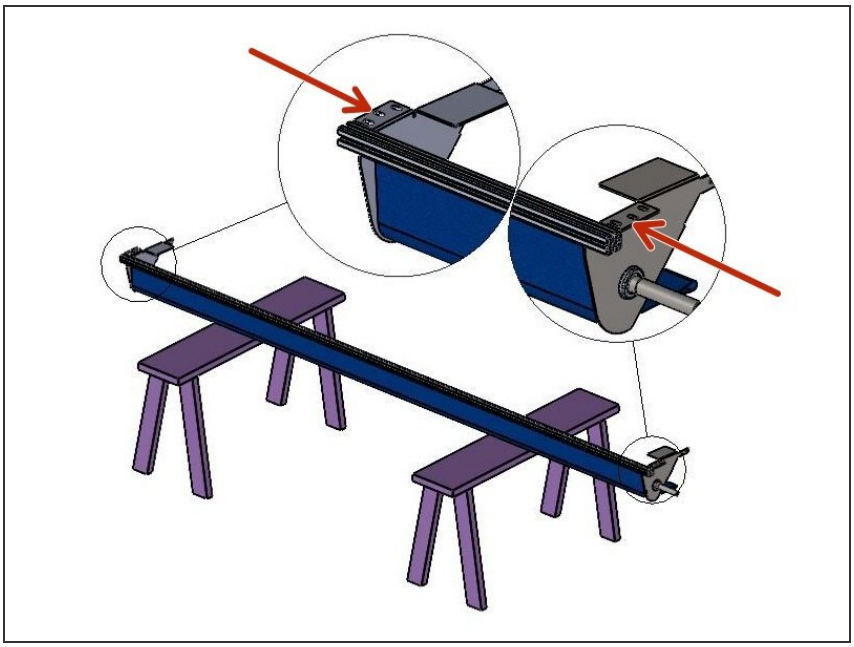

ⓘ The Header Measuring Process is identical for all Door Models. The Door Model you are installing may be different from the Model shown.

- Place the Door roll Header Assembly across a safe and level work surface, and rotate the roll assembly frame so that the Header Bracket Mounting flanges are facing upward.
- Measure the total width of the whole roll assembly from outermost edge of one Header Bracket's Mounting flange to the outermost edge of the opposite side.
- Divide that number by 2. This number is 1/2 of the Header Width, and is used to determine the Header location on the Left and Right Sides of the opening.