
ModeLock PLM1, PLM2, PLM3 Installation Manual

ModeLock PLM1, PLM2, PLM3 Installation Manual. Last mode save module for Porsche.

Written By: Mid City Support

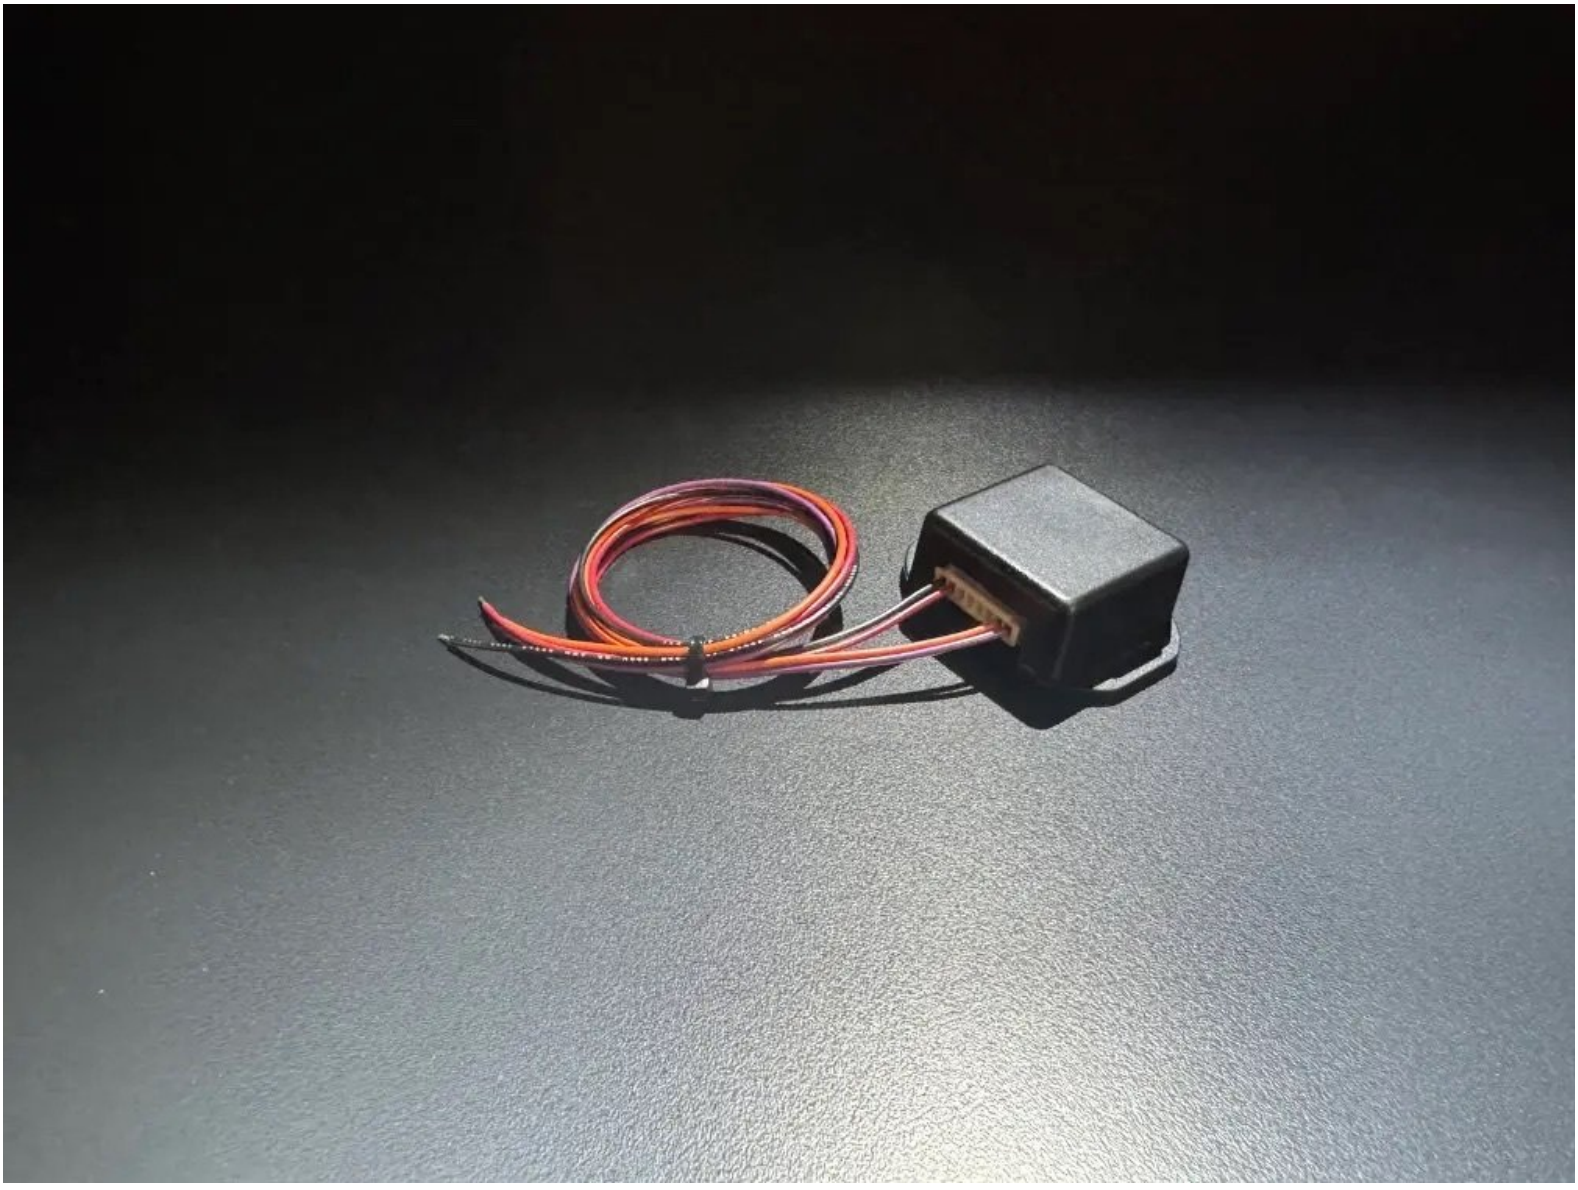

INTRODUCTION

ModeLock is designed to save Porsche Drive Mode settings

If you have any questions, please call Mid City Engineering at 312-421-1114 or email sales@midcityengineering.com


Step 1 — Locate CAN Wires





- Locate plugs in driver side under dash. In a red or tan plug there will be a twisted pair of **orange/brown and purple or orange/brown and blue wires**
- CAN Low is **orange/brown**
- CAN High is **purple** or **blue**


Step 2 — Connect CAN Wires

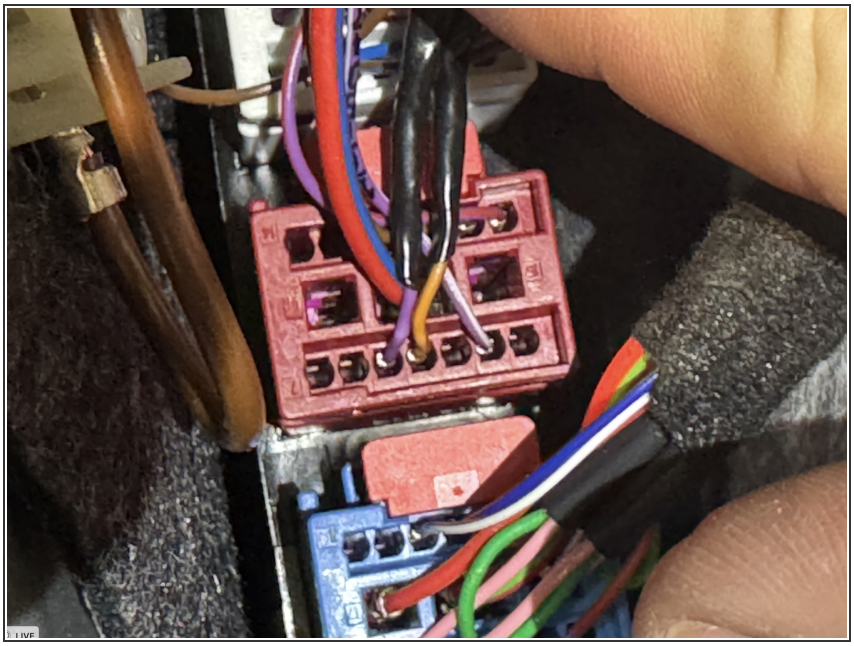

- Connect **orange (CAN Low)** wire from ModeLock harness to OEM **orange/brown (CAN low)** wire
- Connect **purple (CAN high)** wire from ModeLock harness to OEM **purple or blue (CAN high) wire**

⚠ ***Solder and insulate all connections***


Step 3 — Connect Power and Ground

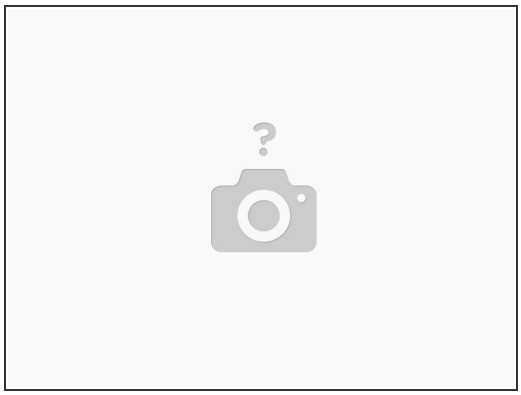

- Locate ignition power wire at OBD plug. Connect **red wire** from ModeLock harness to **12V ignition** power
- Locate ground at OBD plug. Connect **black wire** from ModeLock harness to **chassis ground**


⚠ ***Solder and insulate all connections***

Step 4 — Mount ModeLock Module

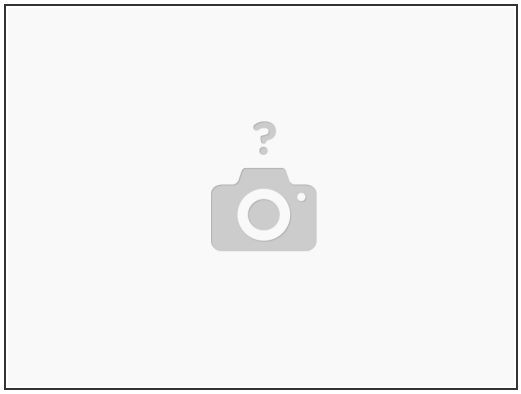

⚠ **Securely mount ModeLock module away from any moving parts or heat sources**

Step 5 — Operation

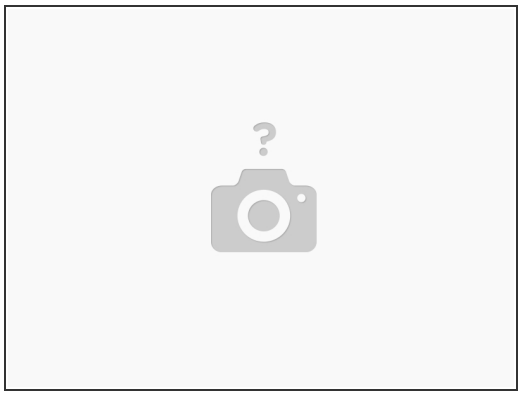

- To use ModeLock, simply set Drive Mode parameters to desired settings. Settings applied before shutting off vehicle will be retained when vehicle is restarted