
Ultimaker 2, 2Go - Adaptor Setup

How to install the 1.75mm Adaptor (B) with Ultimaker 2 and Ultimaker 2Go.

Written By: Adalyn Ordono

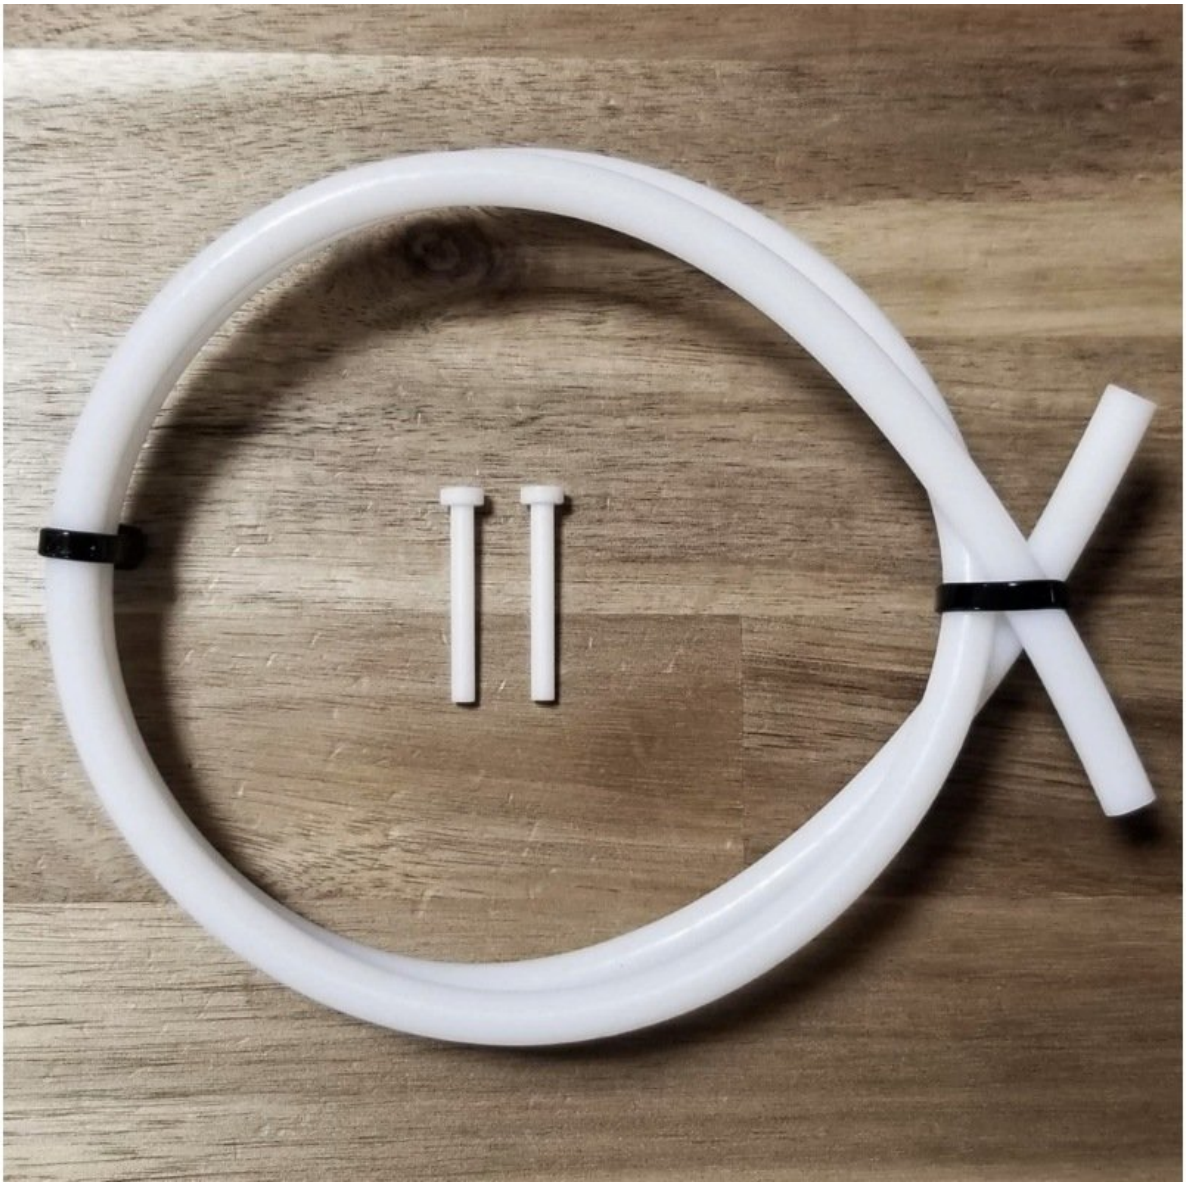


© 2024

INTRODUCTION

This installion uses the 1.75mm Adaptor B


© 2024

Step 1 — Bowden Tube Replacement

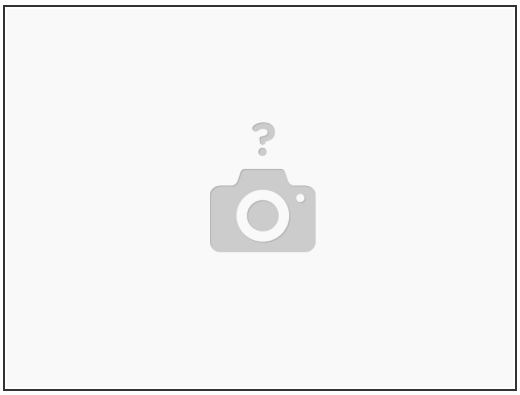

- Replace bowden tube


Step 2 — Install the Palette tube into the extruder input

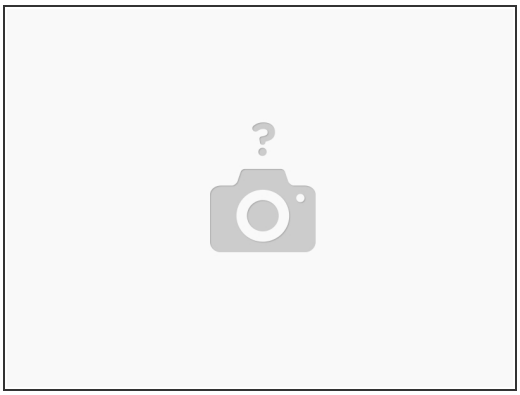

- Install PTFE into the extruder.


© 2024

Step 3 — Installing the short hot-end PTFE sleeve into the hot-end

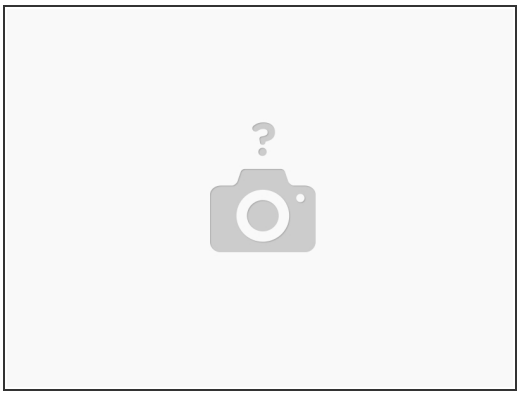


- Installing the PTFE tube into the hot end.

Step 4 — 1.75mm single color test print

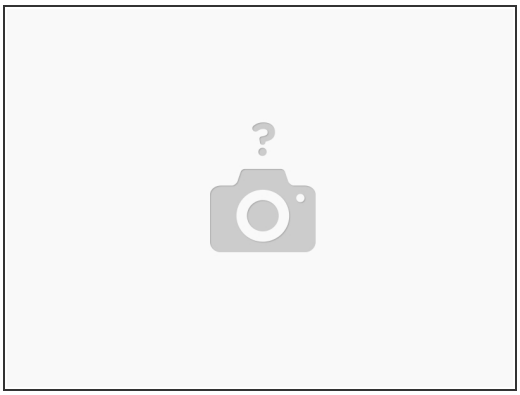

- Single color printing test.

Step 5 — Palette Calibration

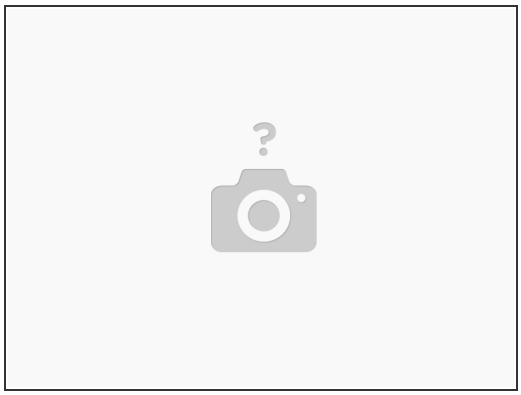

- Continue with calibrating Palette 2 with your Ultimaker 2 or 2Go.

© 2024