27W-8-310 Fender Shrouds 11th Gen Civic

Install instructions for the 27WON fender shrouds for the 2022+ Honda Civic USDM

Written By: Vincent Melon



© 2025

INTRODUCTION

In this installation guide, we have provided step-by-step instructions to install the left and right-hand side 27WON Performance Fender Shrouds.

Advisory:

- Fitment is only confirmed for USDM and the Left-hand drive version of the 2022+ Honda Civic. Fitment not confirmed for Right-hand drive models

TOOLS:

- 3/8" Ratchet (1)
- 8mm Socket (1)
- 10mm Socket (1)
- Rivet Nut Tool (1)
- Handheld Drill (1)
- 7mm or 9/32" Drill Bit (1)

PARTS:

- 11th Gen Civic- Passenger Side Fender Shroud (1)
- 11th Gen Civic- Driver Side Fender Shroud (1)
- M5x0.8x30mm Flanged Bolt (2)
- M5x0.8x40mm Flanged Bolt (1)
- M5x0.8x12mm SS Riv Nut (3)
- M5 Flat Washers (3)

© 2025

Step 1 — Getting Started




- First and foremost; **THANK YOU** for becoming a part of the 27WON Family. We hope to **REDEFINE** your experience of the aftermarket with the highest level Parts, Customer Service, Packaging, & Support


⚠ Install requires drilling a small hole in the driver side fender inside the engine bay

⚠ These do not fit 2023+ Integra

Step 2 — Riv Nut Tool Required



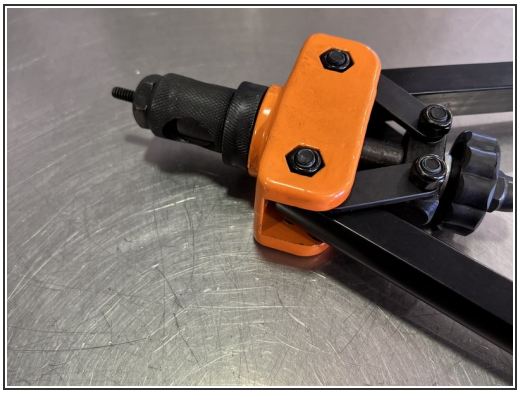

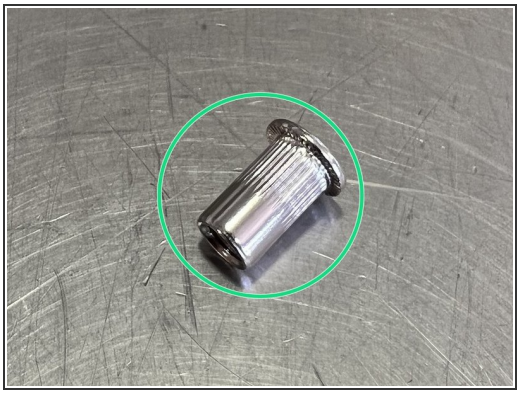

ⓘ These instructions are written using a readily available riv rut install tool. The following steps require a tool like this. A similar style riv nut tool will suffice


ⓘ This riv nut tool can be had for on around $40 from places like Amazon or your local hardware store. Be sure to have an M5 size adapter in your kit

- Riv Nuts are supplied with the Fender Shroud set

© 2025


Step 3 — Identify Work Space



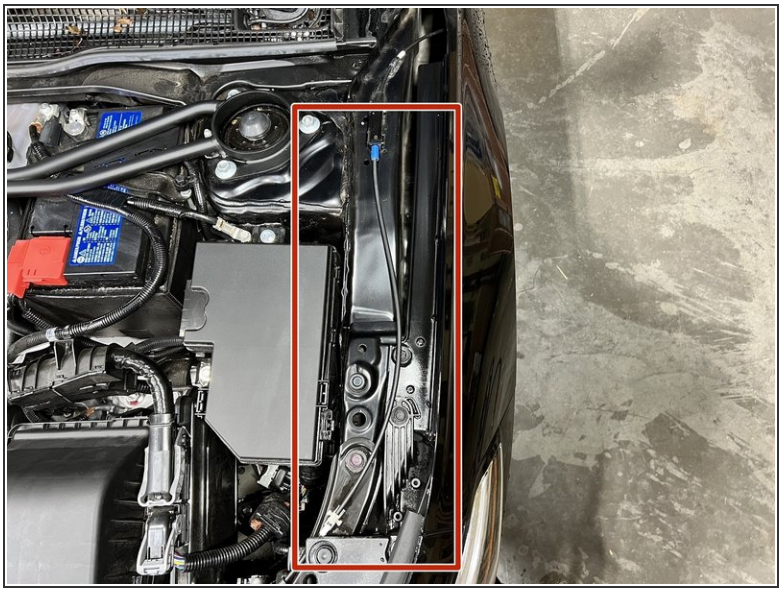

- Open the hood to access both the driver and passenger side fender shroud areas
- Start on the driver-side fender shroud first

Step 4 — Install Riv Nut Into Fender

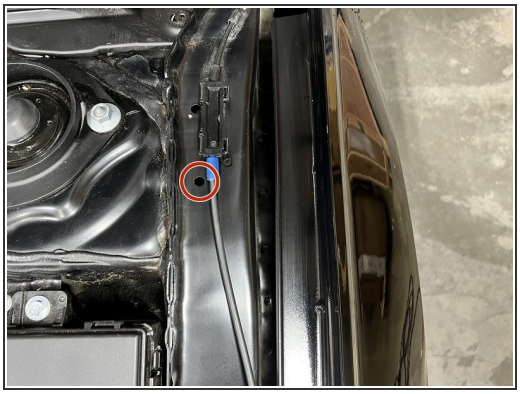






- Locate existing small hole on driver-side fender as shown with red circle. Place supplied Riv Nut in hole with red circle
- Use Riv Nut tool to install M5 Riv Nut
- Riv Nut successfully installed. It is confirmed installed correctly when the riv nut is snug in place and will not pull back out from the hole

© 2025


Step 5 — Remove Driver Side Fender Hardware

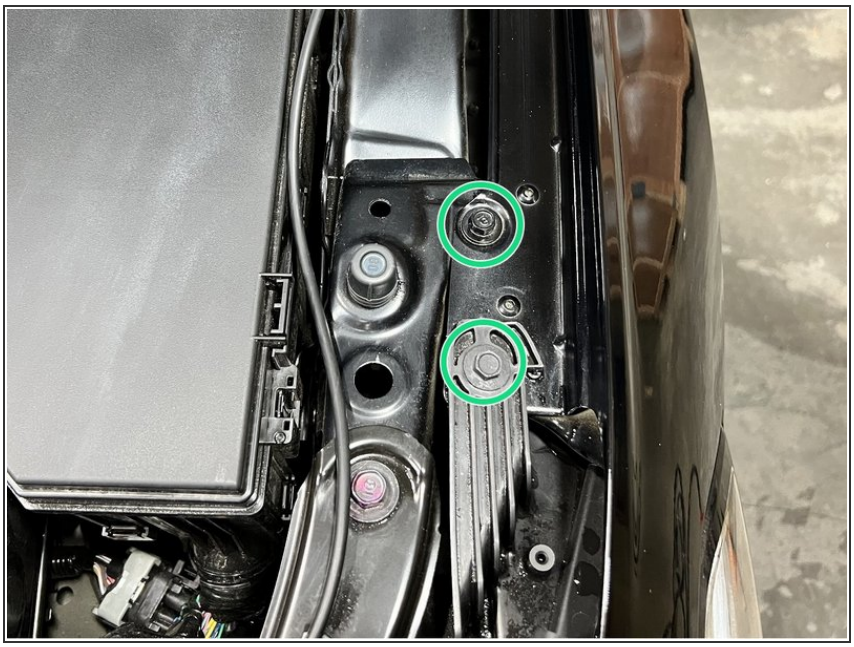

- Use 3/8" ratchet and 10mm socket to remove the two (2) 10mm bolts

© 2025


Step 6 — Add Hole In Driver Side Fender For Riv-Nut

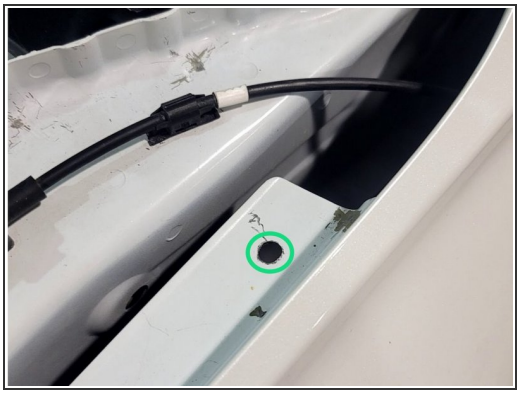
- Place shroud into position. Make sure to line up the other three mounting holes. You can secure mount in place with finger tight hardware if you like
- Use a punch, marker, or even a screw driver and mallet to mark a spot on the fender to add a hole
- Remove shroud
- Using a drill and a 7mm or 9/32" bit, make a hole in the previously marked location
- Use Riv Nut tool to install M5 Riv Nut
  - ⓘ Riv Nut successfully installed. It is confirmed installed correctly when the riv nut is snug in place and will not pull back out from the hole

© 2025

Step 7 — Install Driver Side Shroud




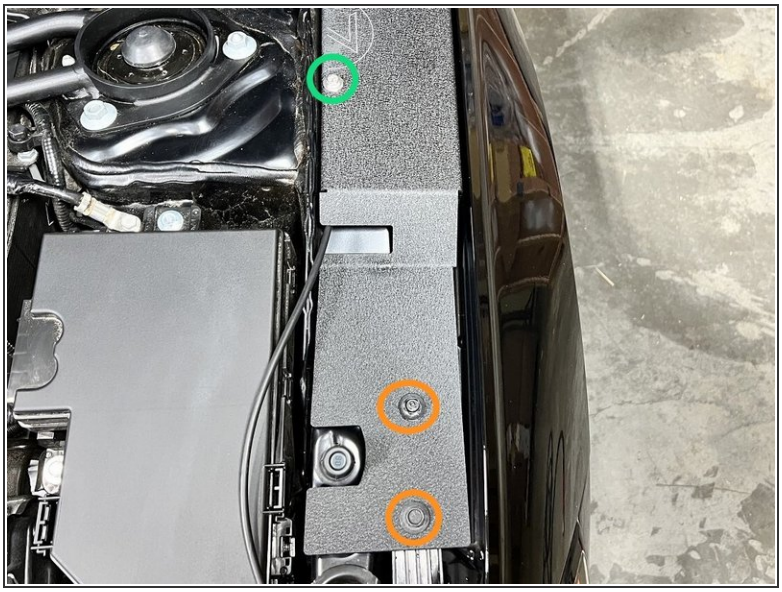

- Place Shroud as Shown
- Line up holes on bottom of shroud with the two bolts removed in the last step
- ⓘ **"torque to snug"** is defined as 1/4 to 1/2 more rotation after setting resistance is felt
- Install 30mm long SS bolt and small washer into Riv-Nut using a 8mm socket or wrench. Torque to snug
- Reinstall both OE bolts using a 10mm socket or wrench and torque to snug
- Install 40mm long SS bolt and small washer into Riv-Nut using a 8mm socket or wrench. Torque to snug

© 2025

Step 8 — Locate Passenger Side Fender Area

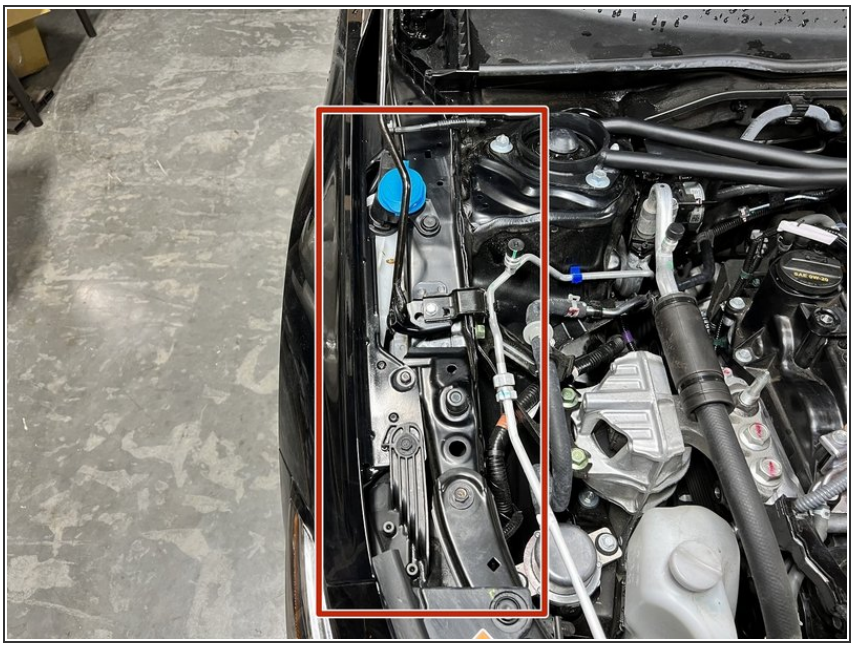

- Locate Passenger side (RH) fender area

Step 9 — Install Riv Nut to Passenger Side Fender






- Locate existing small hole on driver-side fender as shown in red circle
- Use Riv Nut tool to install M5 riv nut
- Riv Nut successfully installed. It is confirmed installed correctly when the riv nut is snug in place and will not pull back out from the hole

© 2025


Step 10 — Remove Passenger Side Fender Hardware

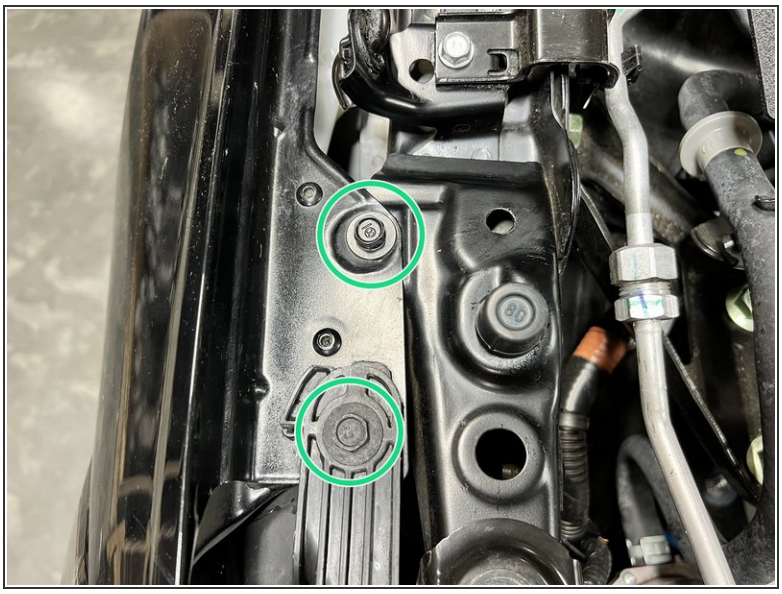



- Use 3/8" ratchet and 10mm socket to remove the two 10mm bolts
- Disconnect the windshield washer hose by pulling the halves apart


Step 11 — Install Passenger Shroud

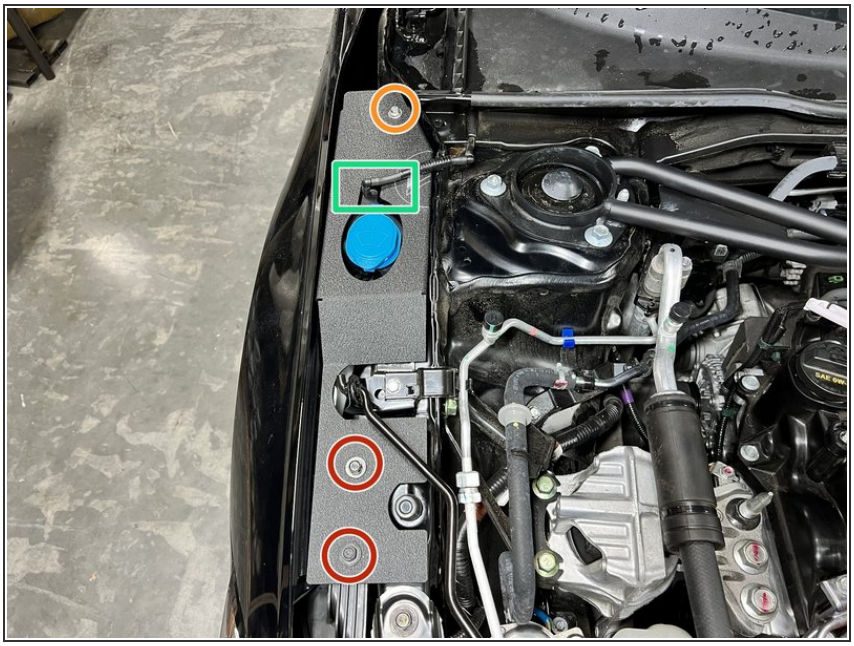

- Place passenger side shroud as shown
- Line up holes on the bottom of the shroud with the two bolts removed in the last step
- Install supplied 8mm SS bolt and small washer and torque to snug
- Reinstall both 10mm bolt and torque to snug
- Put two windshield washer hose halves back together

© 2025

Step 12 — I Dare You to REDEFINE

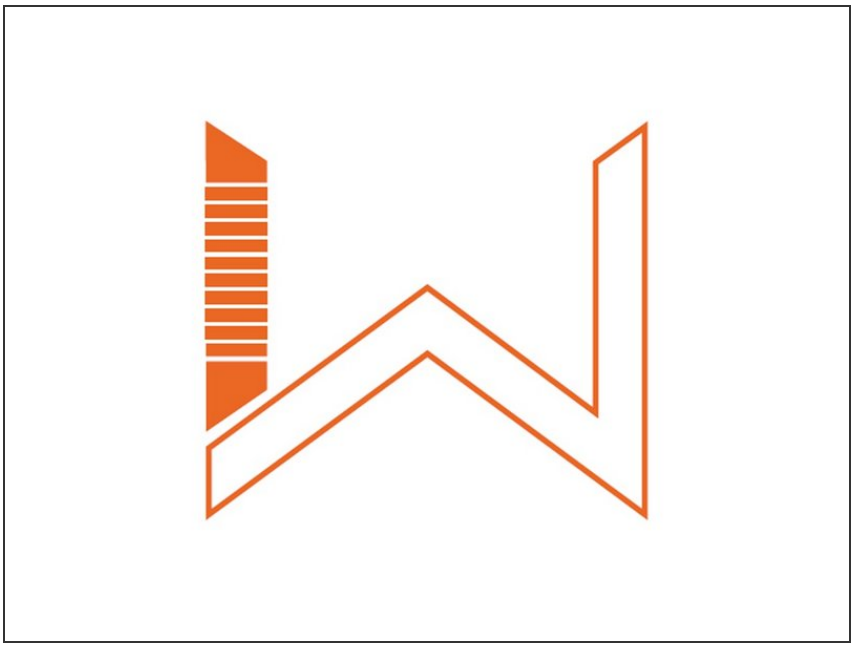

- This completes the installation of your 27WON Performance Fender Shrouds
- We hope you were impressed with your 27WON experience and love your new shrouds for years to come. Email us at sales@27won.com or call us at 571-271-0271 with any questions or concerns
- Please Leave a review here: https://store.27won.com/11th-gen-honda-c...
- Share your experience using #27WON on Instagram and Facebook

© 2025