
Field Installation Procedure - Mills Spray Cool Option

Written By: Trent Plungas

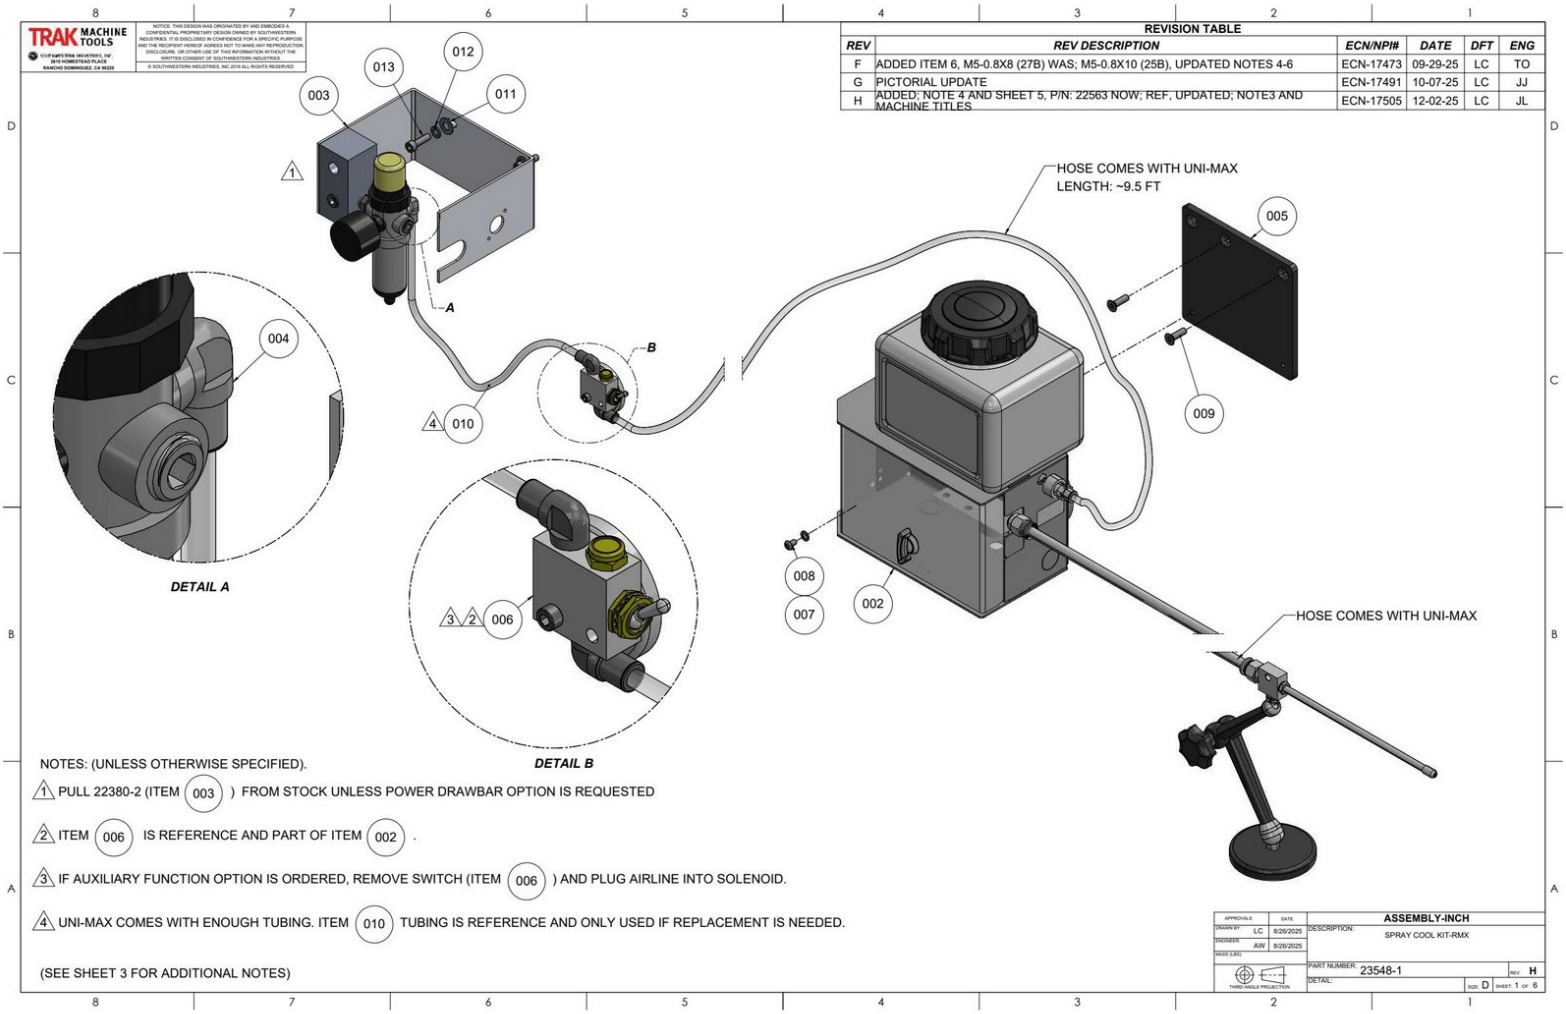


This document was generated on 2025-12-16 07:09:16 AM (MST).

INTRODUCTION


Use this Guide along with drawing 23548 or 23548-1 to install the Uni-Max spray cool kit. Linked Drawings are below.

© 2025

Step 1 — Mount DPM 2, 3, 5 No Shields & All DPM7

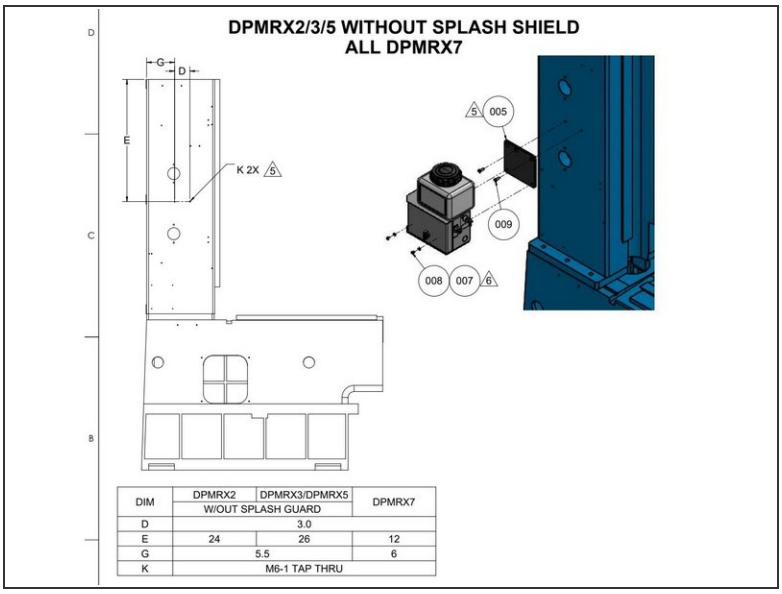


DIM	DPMRX2	DPMRX3/DPMRX5	DPMRX7
	W/OUT SPLASH GUARD		
D	3.0		
E	24	26	12
G	5.5		6
K	M6-1 TAP THRU		

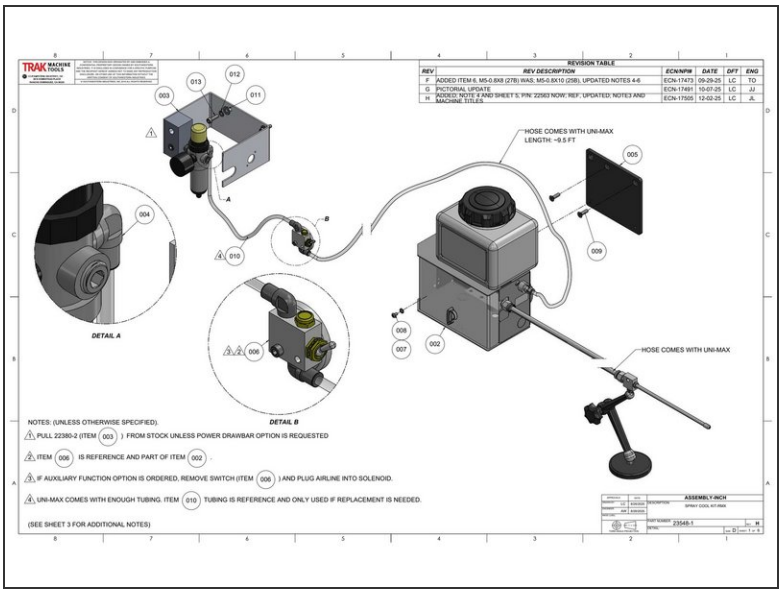


- On the DPM machines, the Uni-Max spray cool kit is to be mounted halfway between the two holes used for moving the machine. The spray mister is not shipped on machine for DPM models 2, 3 & 5.
- The Uni-Max spray cool kit is mounted to side of machine as shown.
- The Uni-Max spray cool kit needs some assembly. See drawings 23548 or 23548-1 for complete instructions.

Step 2 — Mount DPM 2, 3, 5 with Shields

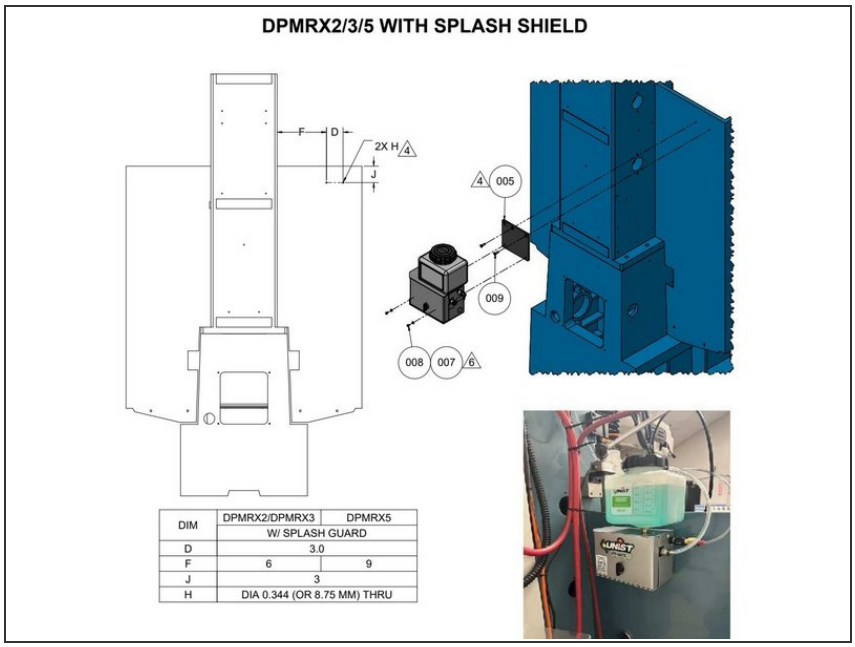


- On machines with splash guards the Uni-Max spray cool kit is to be mounted to rear side of splash guard.


Step 3 — Mount Knee Mill 2, 3, & 4

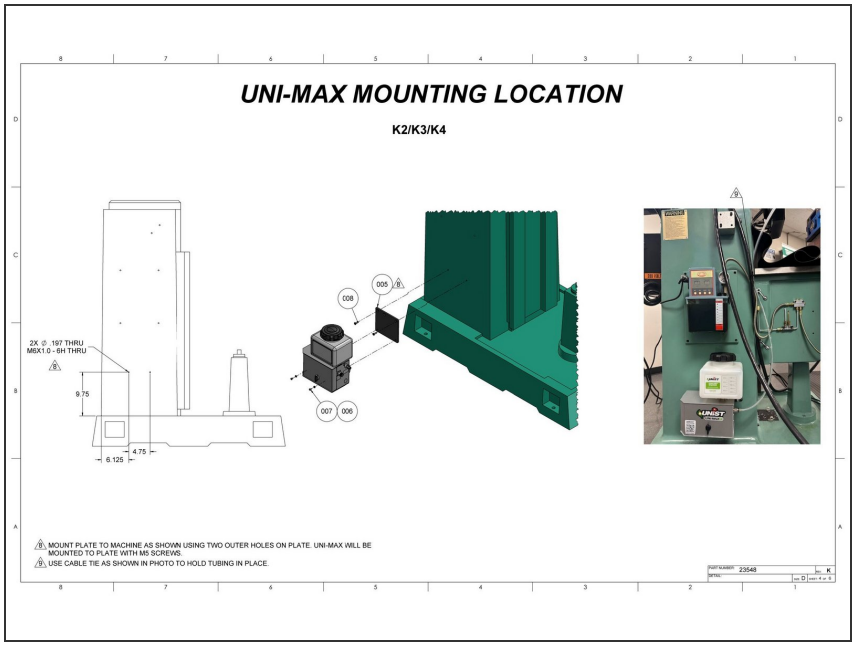


- Mount the Uni-Max spray cool kit to the Knee Mills as shown in Image 1.

Step 4 — Recommended Air Switch Mounting Locations

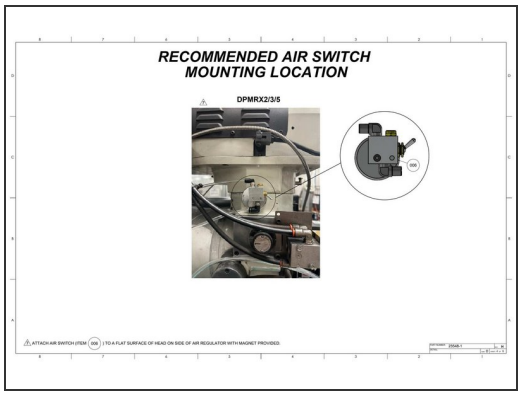

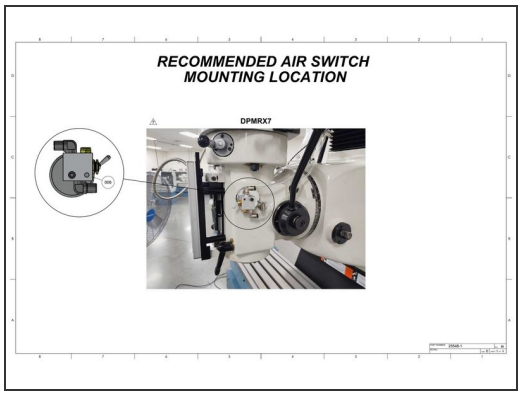

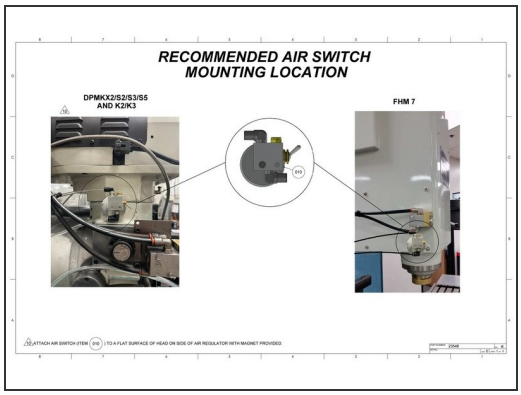

- Photos 1 and 2 show the recommended mounting locations for the air switch.
- Photo 3 shows the recommended switch mounting locations on older machines.