



Memory

Written By: Iroh



INTRODUCTION

Follow this guide to remove and replace the memory (aka RAM) in your Framework Laptop 16.

Your Framework Laptop has two DDR5 SO-DIMM sockets that supports up to 32 GB each of DDR5-5600 memory. If you install memory faster than the supported speed, the laptop will work properly, but not use the full memory speed.

- For a list of validated memory modules for AMD Ryzen™ 7040 Series, [check out this link](#).
- For a list of validated memory modules for AMD Ryzen™ AI 300 Series, [check out this link](#).



TOOLS:

- [Framework Screwdriver](#) (1)
-

Step 1 — Before you begin



- Unplug all cables and fully shut down your laptop.

Step 2 — Unlock the Input Modules



- Use your fingernail to pull out the two Input Module latches and unlock them.
 - ⓘ The latch will show red if it's unlocked.

Step 3 — Remove the Touchpad Spacers



- Use your fingers to slide the Touchpad Spacer toward the bottom edge of the laptop and unclip it.
 - ❗ If you're having trouble, check if the corresponding Input Module latch is properly unlocked.
- Lift the Touchpad Spacer off the laptop and remove it.

Step 4



- Repeat the same procedure for the other touchpad spacer.

Step 5 — Remove the Touchpad Module



- Use your fingers to slide the Touchpad Module toward the bottom edge of the laptop and disconnect it.
 - ❗ If you're having trouble, check if the Input Module latches are properly unlocked.
- Lift the Touchpad Module and remove it.

Step 6 — Remove the keyboard




- ❗ The keyboard is held in place with strong magnets. Apply gradually increasing force to avoid having the keyboard violently eject.
- Grip the two pull tabs along the bottom of the keyboard and lift until its magnets release.
- Remove the keyboard.

Step 7 — Remove the Input Modules




- ① Your Input Module(s) might be different, but the procedure to remove them is the same.
- Grip the pull tab at the bottom of the Input Module and lift until its magnets release.
- Remove the Input Module.
- Repeat for any remaining Input Modules.

Step 8 — Disconnect the Mid Plate cable

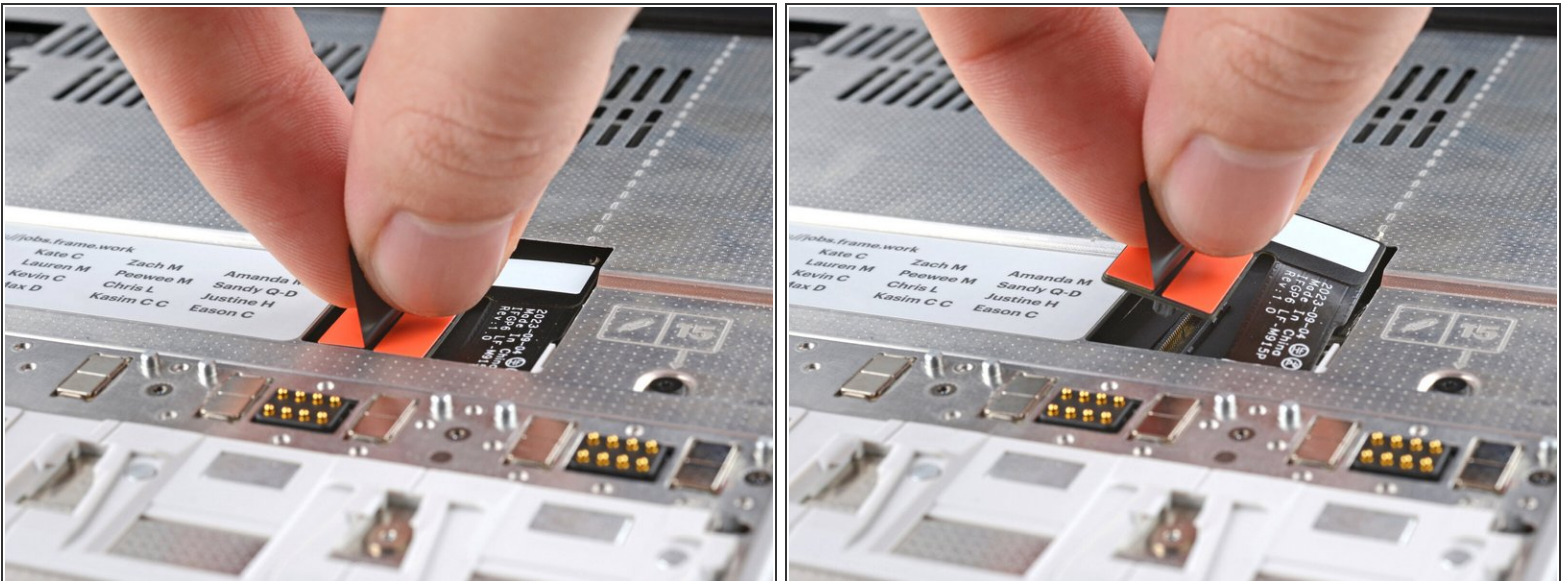

- Grip the black pull tab on the Mid Plate cable press connector and lift up to disconnect it.

Step 9 — Loosen the Mid Plate screws

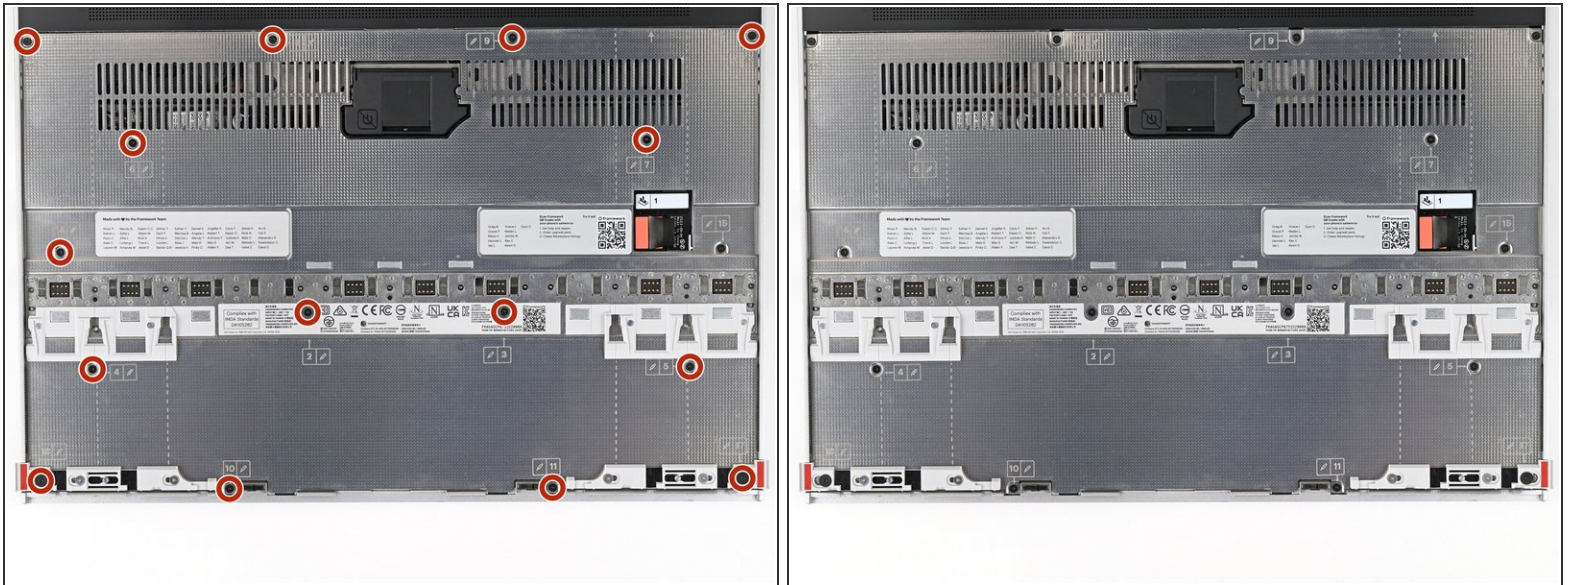

- ❗ The Mid Plate screws are ordered from 2–17 (number 1 is the press connector). You don't have to follow the order, but you can use it to help keep track of the screws you've loosened.
- Use your Framework Screwdriver to loosen the 16 captive T5 Torx screws securing the Mid Plate.

Step 10 — Remove the Mid Plate



- Use your fingers to lift the Mid Plate off the laptop and remove it.

Step 11 — Remove the memory



- Push the two [metal arms](#) on each side of the RAM stick outward until they disengage and the stick pops up at a shallow angle.
- Repeat for the other RAM stick.

Step 12



- Slide the RAM stick out of its socket and remove it.
- Repeat for the other RAM stick.

Step 13 — Disassembly complete



- Congratulations on completing disassembly! **The remaining steps will show how to reassemble your Framework Laptop.**

Step 14 — Install the memory



⚠ **Hold the memory module by its edges. Don't touch the gold contacts with your fingers. If you do, wipe the contacts with a clean, lint-free cloth to remove any finger oils.**

- Orient the module with its label facing down and align the gold contacts with the left socket labeled **DDR5 Channel 0**.
- Insert the contact edge into the socket at a shallow angle. The gold contacts should mostly be covered by the socket.
- Press the edges of the memory module down until the side clips lock it in place.

Step 15




- If you're using two memory modules, orient the other module so its label is facing upward and repeat the previous step for the other socket labeled **DDR5 Channel 1**.

Step 16 — Place the Mid Plate





- Place the Mid Plate on the laptop, making sure it sits evenly on its [alignment pegs](#).

Step 17 — Tighten the Mid Plate screws

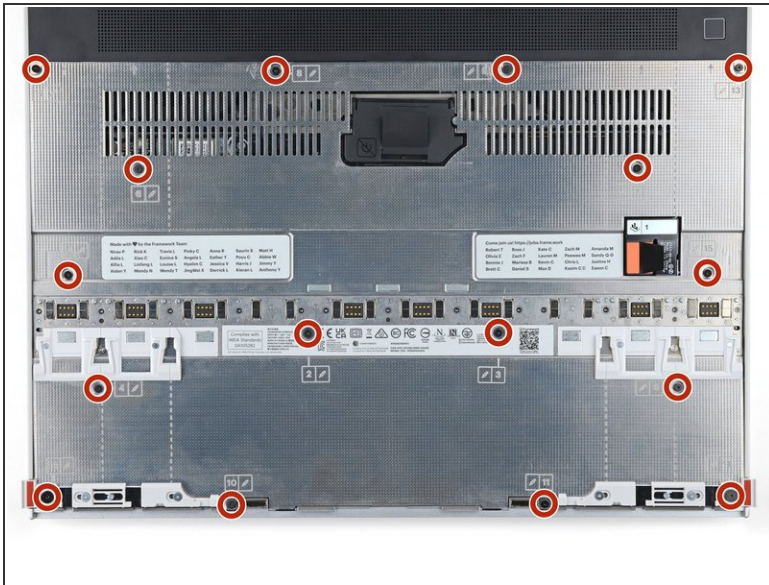

- Use your Framework Screwdriver to tighten the 16 captive T5 Torx screws **in order** (starting with 2) to secure the Mid Plate evenly.

Step 18 — Connect the Mid Plate cable

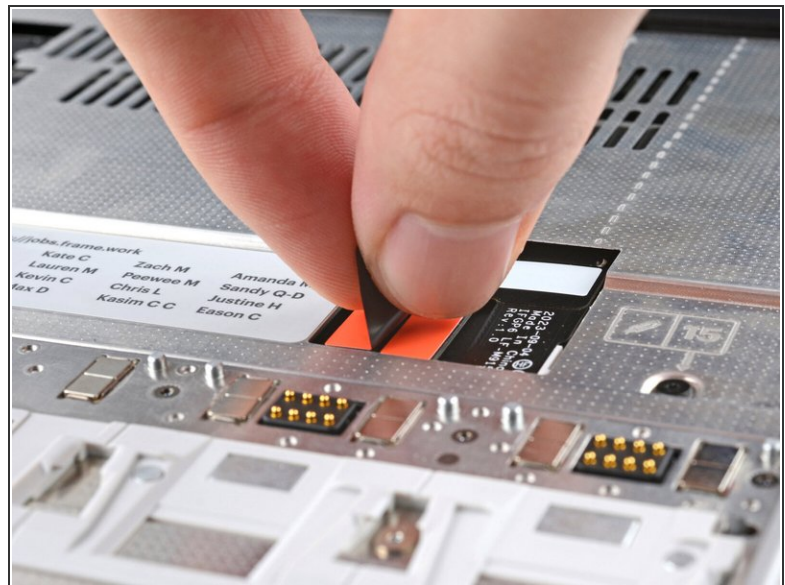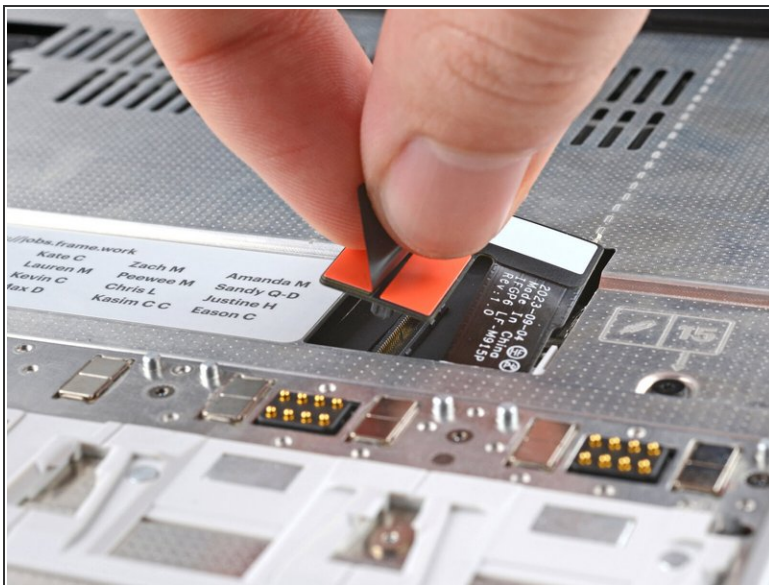

- Align the Mid Plate cable press connector over its socket and press down to connect it.

Step 19 — Install the Input Modules



- ❗ Your Input Module(s) might be different, but the procedure to remove them is the same.
- Align the top edge of the Input Module with the top edge of the laptop.
- Lay the Input Module on the laptop and let the magnets pull the keyboard into place
- ❗ Make sure the Input Module is seated properly on its [alignment pegs](#) and sits flush with the edges of the laptop.
- Repeat for any remaining Input Modules.

Step 20 — Install the keyboard



- Align the top edge of the keyboard with the top edge of the laptop.
- Lay the keyboard on the laptop and let the magnets pull the keyboard into place
- ❗ Make sure the keyboard is seated properly on its [alignment pegs](#) and sits flush with the edges of the laptop.

Step 21 — Install the Touchpad Module



- Place the Touchpad Module flat on its cutout so [its clips](#) are properly aligned.
- Press the Touchpad Module down and slide it into place so it lines up evenly with the bottom edge of the laptop.

Step 22 — Install the Touchpad Spacers



- Place the Touchpad Spacer over its spot on the laptop with the bottom edge overhanging slightly.
- Slide the Touchpad Spacer towards the top of the laptop to secure it.
- Repeat the same procedure for the other Touchpad Spacer.

Step 23 — Lock the Input Modules



- Push the Input Module latches back into place to lock them.

You finished fixing your Framework Laptop!

After installing new memory, the laptop will take longer to start up for the first time, and the screen will turn on slower. This is normal—the system is performing memory training.

Take your e-waste to an [R2 or e-Stewards certified recycler](#).

If you need help, [contact Framework support](#).