Re-Homing Limits on MGM Control Panel

Written By: Trent Borgardt



Step 1 — Re-Homing Limits on MGM Control Panel









- Look at the Status Bar on the Top Edge of the Touchscreen. It should Read "Home System".
- To Home the System, we only need to tell the Encoder where the Floor/Close Limit is.
- It will then Remember how far it has to Travel from there, to Reach the Open Limit.
- Tap the SETUP AND DIAGNOSTICS Button.
- Tap the SETUP Button.
- Note, if Password Protection is Setup on your Control Panel, you will next be asked to Enter the Password.
- Finally, Tap the QUICK SETUP Button.

Step 2

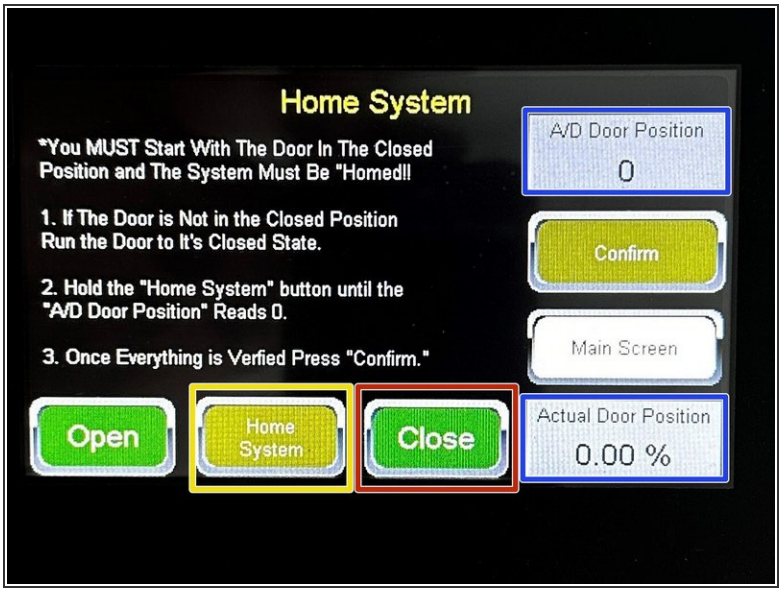

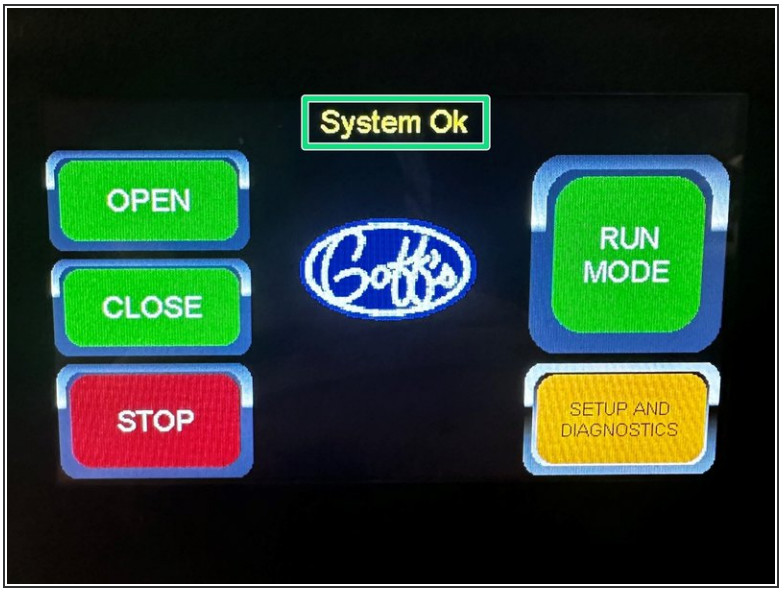

- Use the Close Button to Jog the Door to the Desired Closed Position.
- Once there, Press and Hold the HOME SYSTEM Button.
- Hold the HOME SYSTEM Button until the "A/D Door Position" and "Actual Door Position" values Jump to Zero.
- Press the MAIN SCREEN Button to Return to the Home Screen.
- The Status Bar on the Top Edge of the Touchscreen should now Read "System Ok".
- ⓘ The Door should now Run in its Original/Previously set Limit Range.