Polaris RZR 570

FLS-243012

Written By: Laurent Metivier



This document was generated on 2026-11-21 09:31:00 PM (MST).


Step 1 — Removing the stock shocks



- Lift the vehicle using a jack or stand so that the wheels are off the ground. Refer to your vehicle's owner manual for specific instructions on how to remove the stock shocks. Keep your original bolts to re-use when installing your new Elka shocks.


Step 2 — Installing the new Elka front shocks



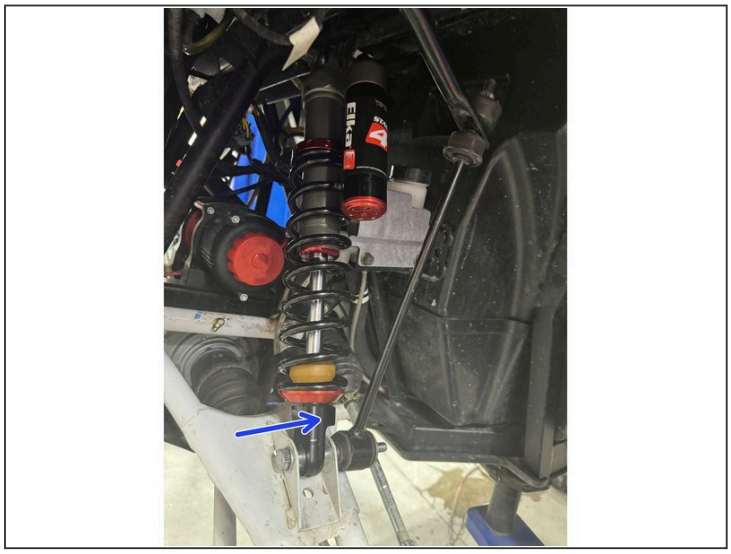

- Install the front new Elka shocks with the reservoir (on Stage 3-4-5) or Schraeder nitrogen valve (on Stage 1-2) **at the top of vehicle.** (Right side shown).
- On Stage 2, Stage 4 and Stage 5 models, the lower shock eyelets should be installed with the rebound adjuster oriented **towards the rear of the vehicle** as shown by the blue Arrow on the photo (LEFT side shown). If needed, you can turn the lower eyelet to orient properly.

Step 3 — Installing the new Elka rear shocks

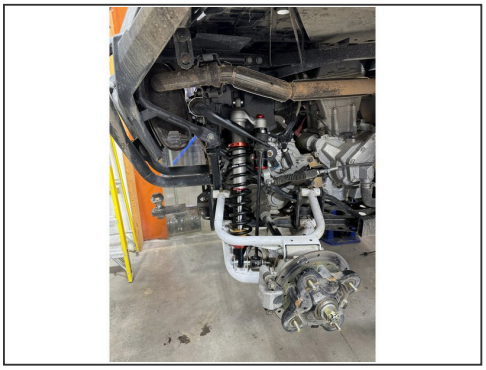



- Install the front new Elka shocks with the reservoir (on Stage 3-4-5) or Schraeder nitrogen valve (on Stage 1-2) **at the top of vehicle.** (Right side shown).
- On Stage 2, Stage 4 and Stage 5 models, the lower shock eyelets should be installed with the rebound adjuster oriented **towards the rear of the vehicle** as shown by the blue Arrow on the photo (right side shown). If needed, you can turn the lower eyelet to orient properly.
- Install the rear shock with the reservoir facing the front of the side by side.