POLARIS RANGER/RANGER CREW XP 1000 NORTHSTAR 2022-2024

Written By: Laurent Metivier



This document was generated on 2026-11-23 07:10:02 PM (MST).

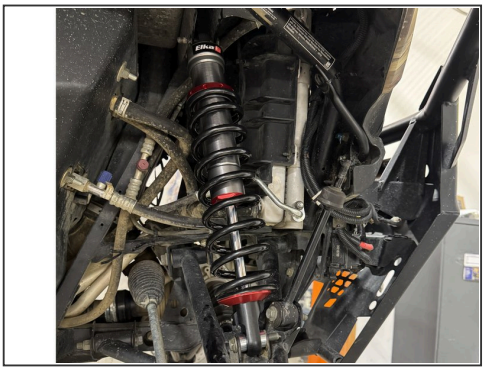
Step 1 — Removing stock Shocks

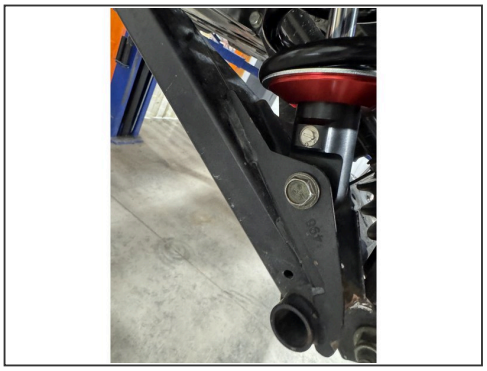


- Lift the UTV using a jack or stand so that the wheels are off the ground. Refer to your vehicle's owner's manual for specific instructions on how to remove the stock shocks. Keep the Original bolts to re-use when installing your new Elka Shocks

Step 2 — Installing Front Shock

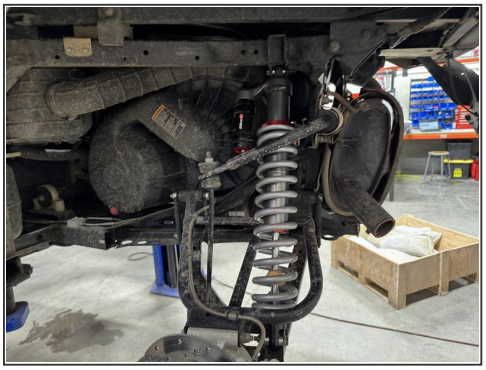
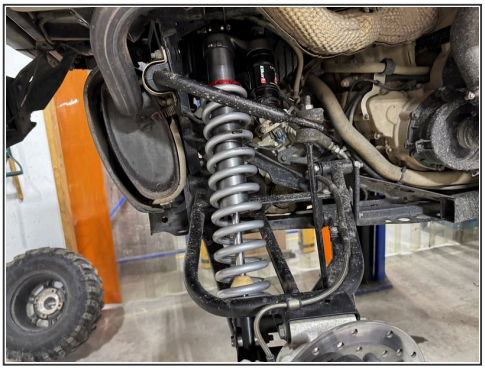
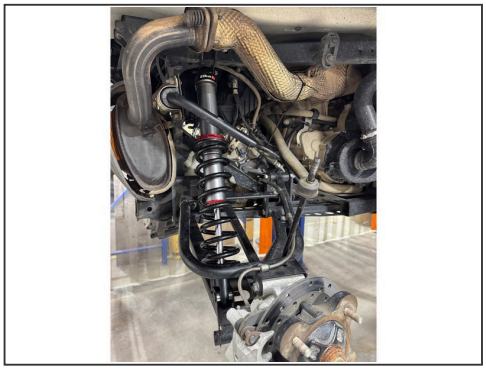






- Install the front new Elka shocks with the reservoir (on Stage 3-4-5) facing the side of the UTV.
- On Stage 2, Stage 4 and Stage 5 models, the lower shock eyelets should be installed with the rebound adjuster oriented towards the back of the vehicle. If needed, you can turn the lower eyelet to orient properly.
- ** Always use the INNER upper shock bracket when installing Elka shock.**

Step 3 — Installing Rear Shock

- Install the new Elka rear shocks with the piggyback reservoir at the top and oriented towards the front of the vehicle.
- On Stage 2, Stage 4 and Stage 5 models, the lower shock eyelets should be installed with the rebound adjuster oriented towards the back of the vehicle. If needed, you can turn the lower eyelet to orient properly.
- ** Always use the INNER upper shock bracket when installing Elka shock.**