


Polaris RZR 570 46mm REMOTE RESERVOIRS

FLS-243012-2

Written By: Steve Boulay

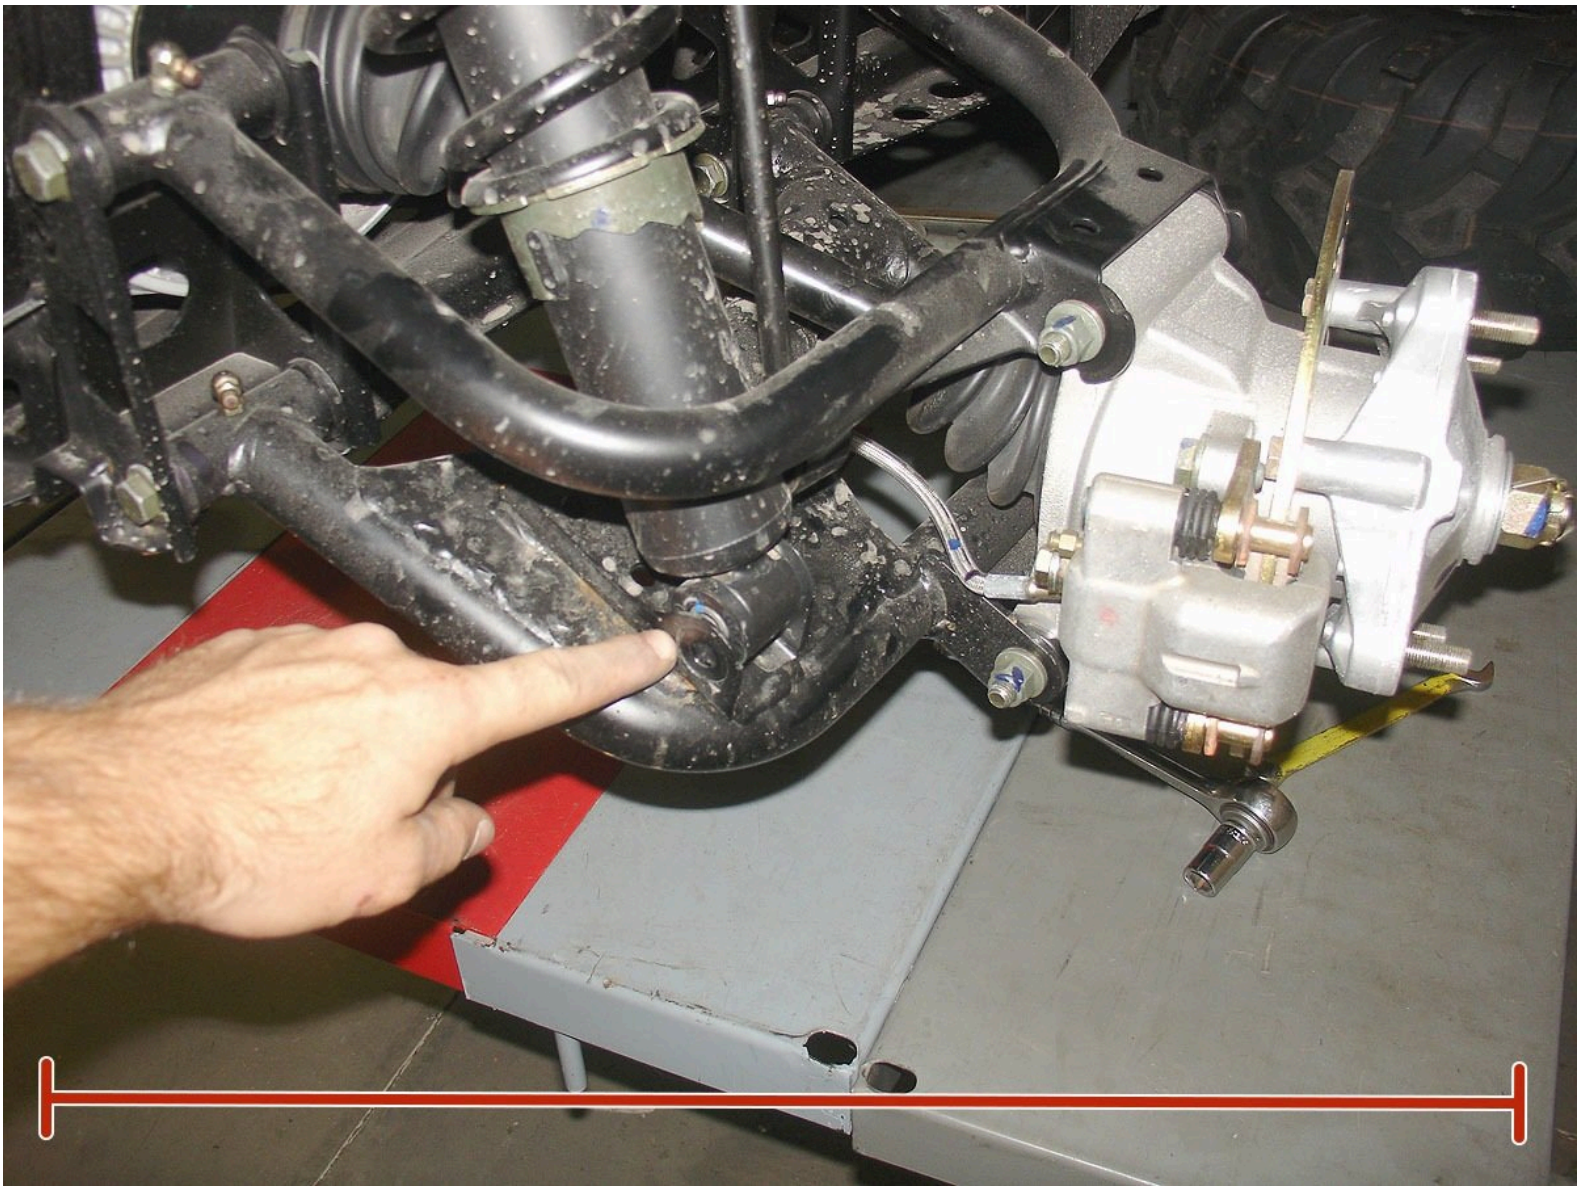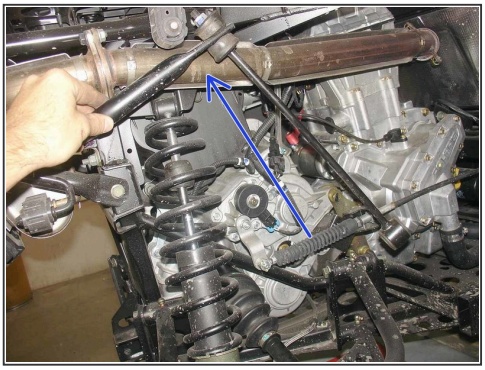
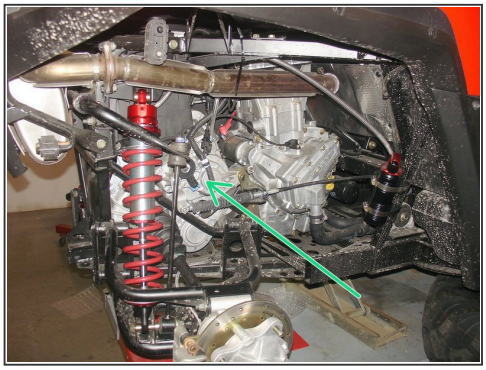


Step 1 — REAR SHOCKS


- Remove the wheels then the stock rear right shock, starting with the lower mounting bolt. Refer to the vehicle’s owner manual if needed.
- Disconnect the sway bar on both sides, then move it up.
- Install the Elka shocks with the hose at the top, towards onboard of the vehicle and coming out towards the front of the vehicle. Secure the shocks with the mounting bolts then route the hose and reservoir over the rear sub frame and exhaust pipe, then attach the reservoir on the vertical cross-member of the rear frame.

Step 2 — REAR SHOCKS

- Make sure to secure the hose to the frame using zip-ties as shown.
- Repeat for the rear left side.

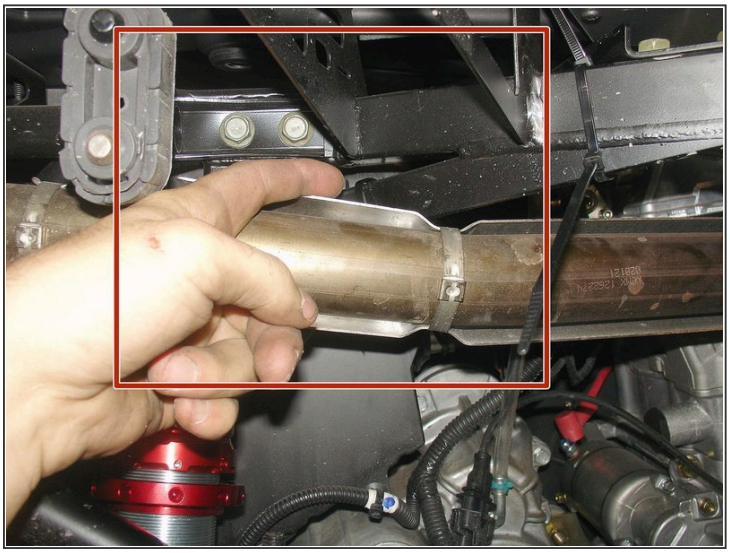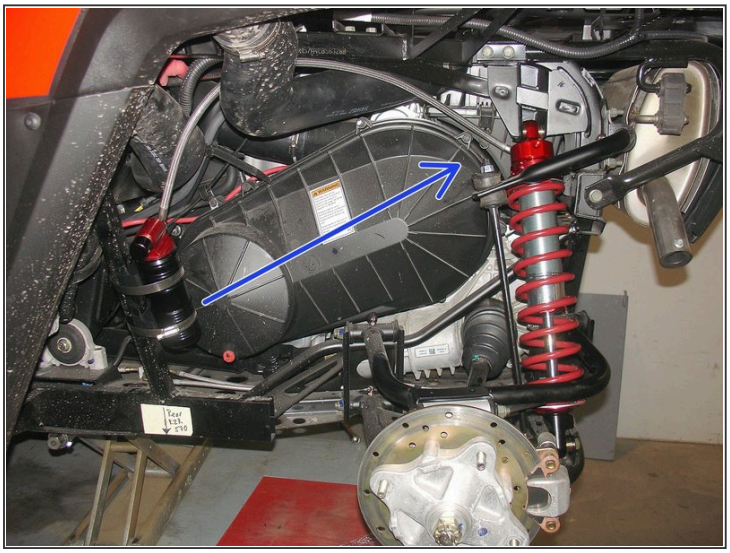Step 3 — FRONT SHOCKS



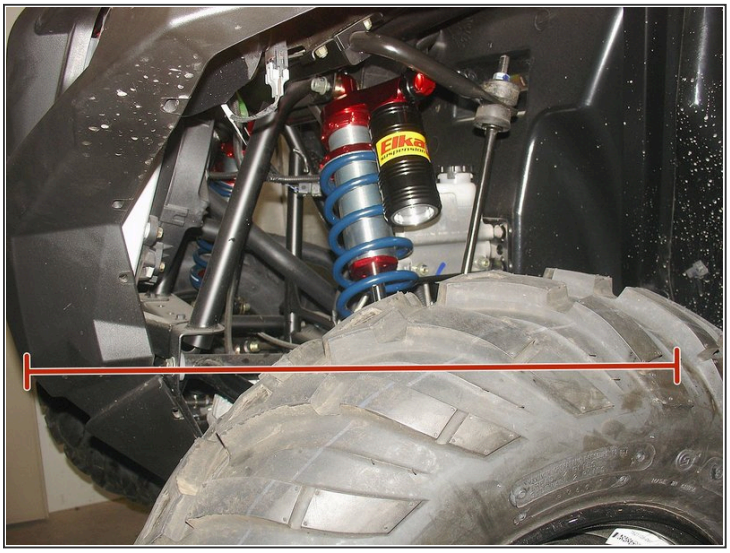

- Remove the stock shocks. Refer to the vehicle’s owner manual if needed.
- Install the Elka shocks with the piggyback reservoir (Stage 2-3-4-5) or nitrogen valve (Stage 1-1+) at the top and oriented towards outboard of the vehicle.
- **Left side**
- **Right side**
- Installation is completed.