
HRN-CD10Y3 - Go Device Y Adaptor Harness (RP1226 to 16 or 9 Pin)

Written By: Jason Fox

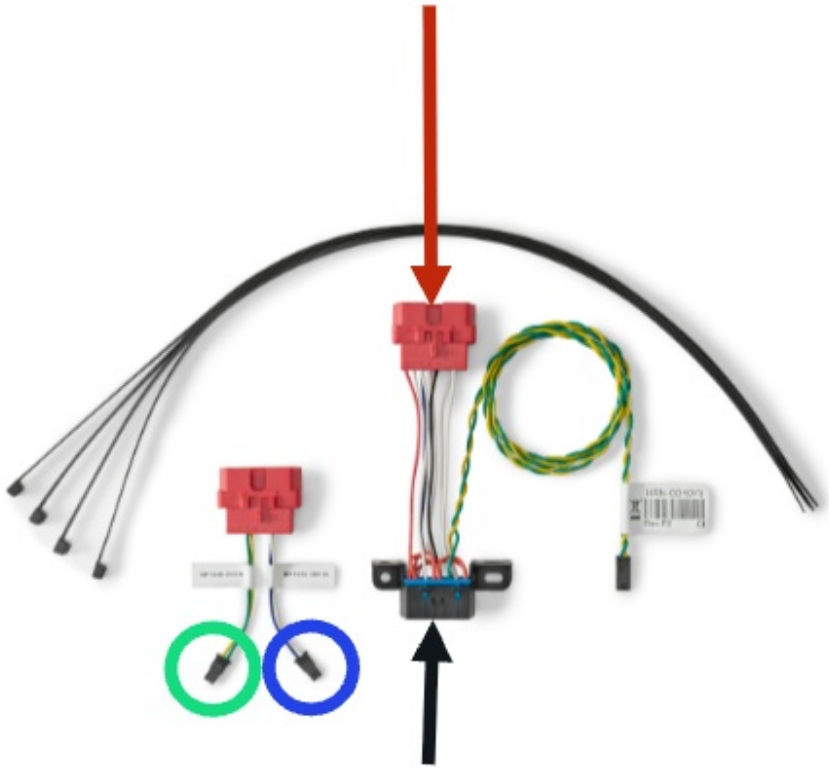

© 2026 - Uncontrolled If Printed


INTRODUCTION

To be used for 2022+Paccar vehicles with MX engine where enhanced data like Odometer from the dashboard (instead of just from the ECM) and TPMS data is required.

This harness is MANDATORY for CARB and the Clean Truck Programs.

© 2026 - Uncontrolled If Printed

— HRN-CD10Y3 - Go Device Y Adaptor Harness (RP1226 to 16 or 9 Pin)

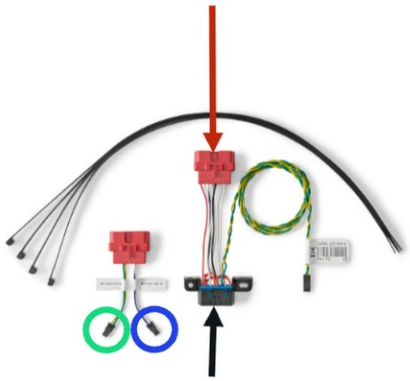



- HRN-CD10Y3 sits between the 9-pin or 16-pin side of the GEOTAB harness and the GO9
- Plug GO9 into this end of the harness.
- Plug standard Geotab 9pin into this end of the harness
- Verify what pins are present on the vehicles RP1226. 250k is pins 2 and 9 while 500k is on pin 4 and 11.
  - If the RP1226 on the vehicle side has the 250k OR both the 250k and 500k populated. Plug the 250k lead into the HRN-CD10Y3 two pin connector.
  - If the vehicles RP1226 has ONLY the 500k populated, plug the 500k lead into the HRN-CD10Y3 two pin connector.
- See completed harness setup. That 9-Pin on the left could be swapped out for a 16-Pin as needed.

© 2026 - Uncontrolled If Printed