





Mute alarm

Written By: StJohn Vuetilovoni

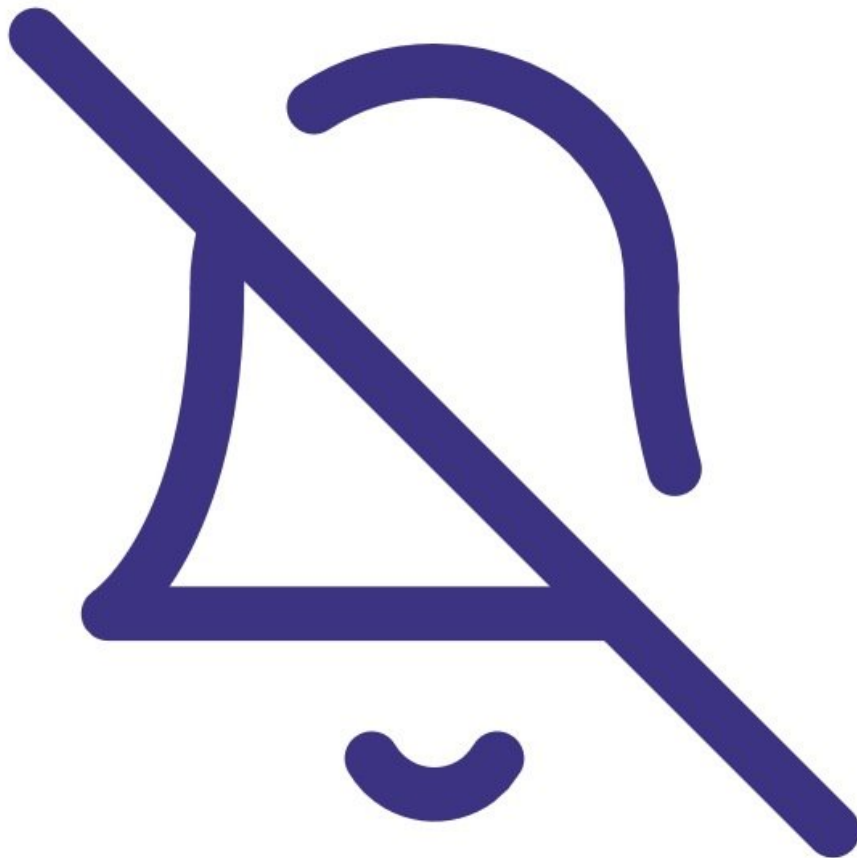


Step 1 — Mute alarm

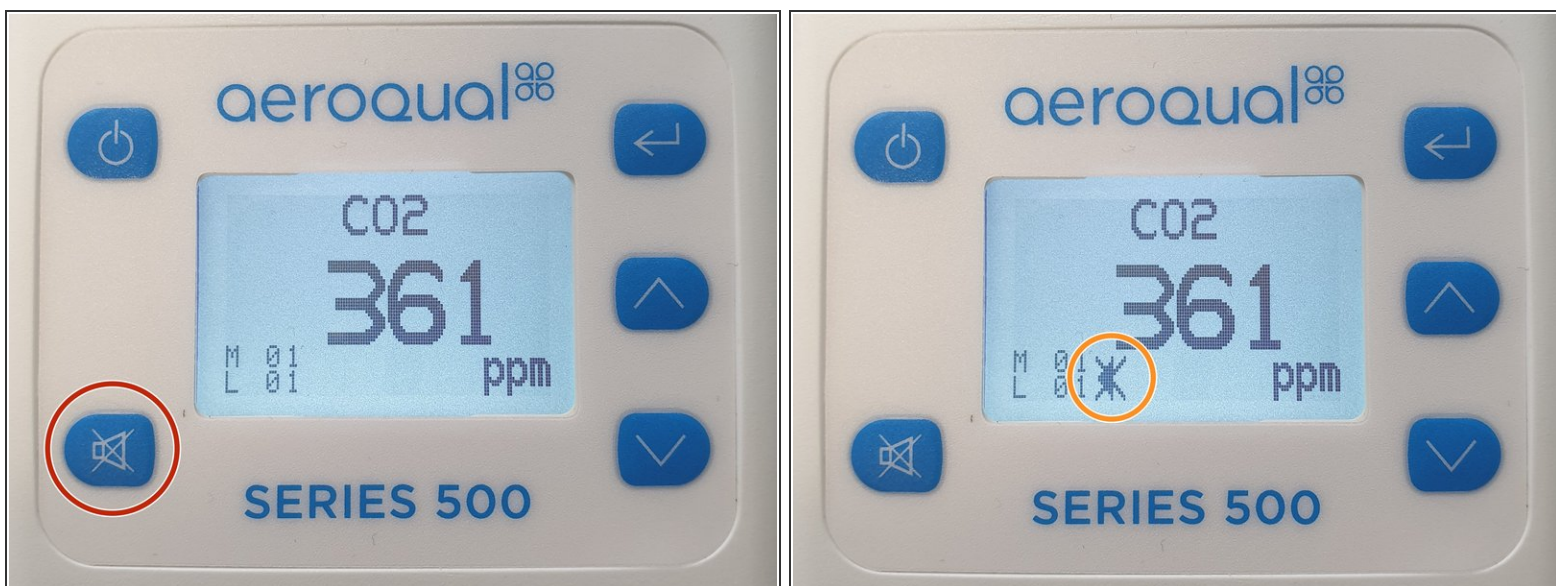


- To temporarily mute the alarm, press the **MUTE** button.
- The alarm mute symbol appears on the main display.
- ❗ This only mutes the alarm during that specific alarm condition. Once the concentration has moved back into the alarm limits, the settings reset.
- To permanently mute the alarm, you need to disable the alarm.

Step 2 — Disable alarm

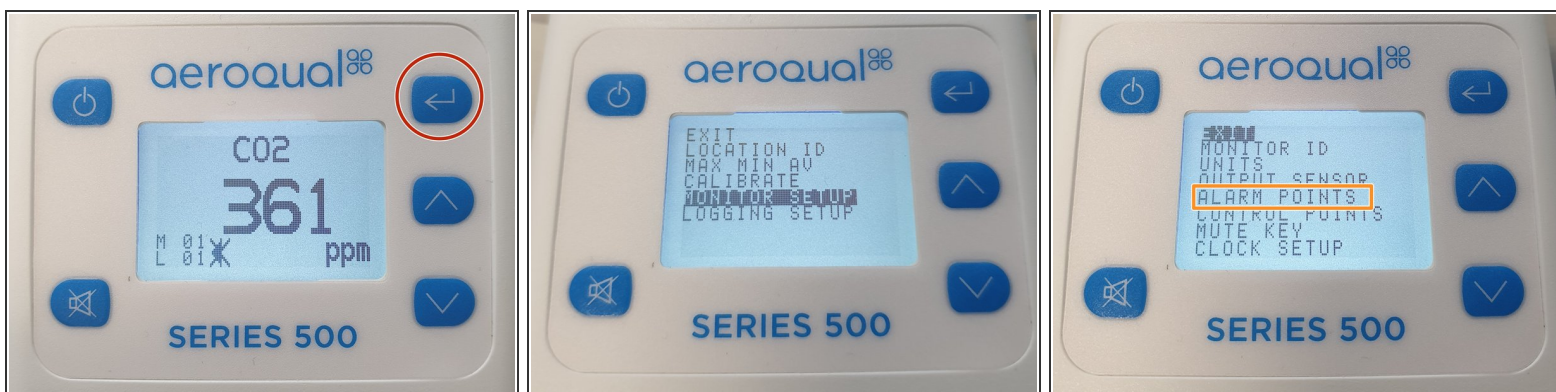

- Press the **ENTER** button and select **MONITOR SETUP** from the main menu.
- Select **ALARM POINTS** from the secondary menu.

Step 3 — Disable alarm

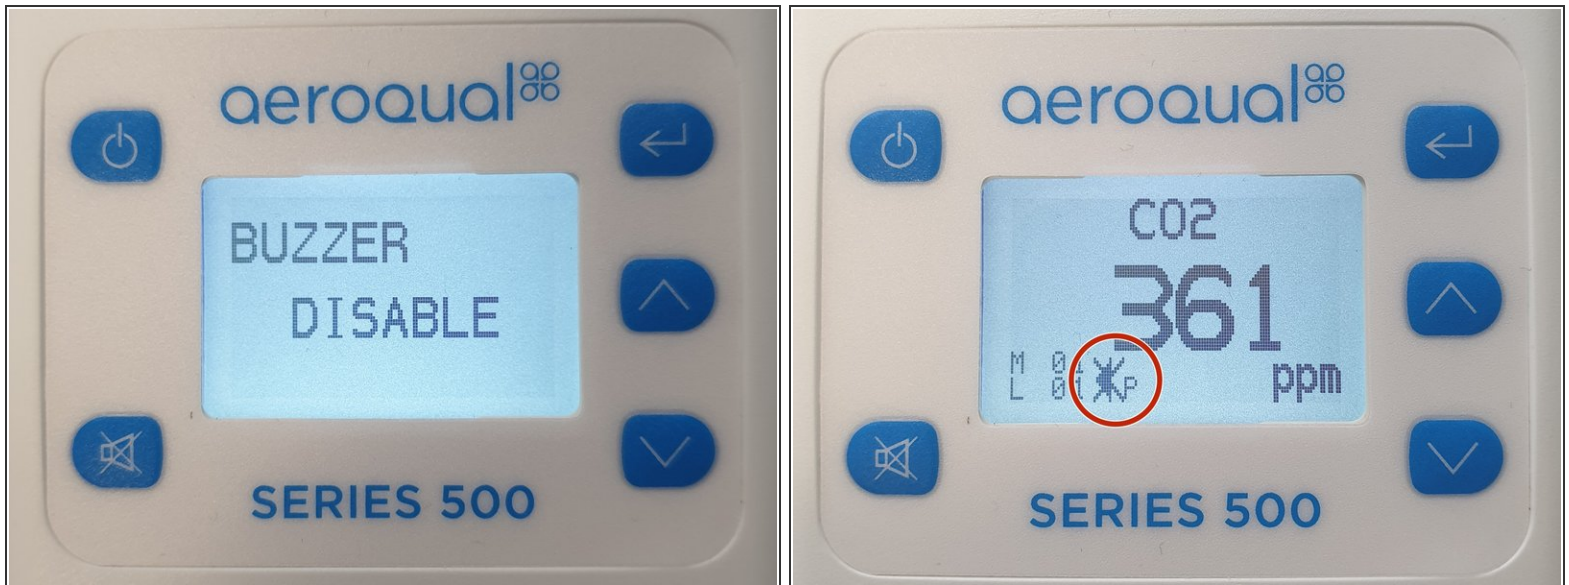

- Use the **UP/DOWN** buttons to **DISABLE** the alarm.
- When the alarm is disabled (permanently muted) a **P** shows to the right of the alarm mute symbol on the main display.
- ① The **P** stands for permanent.

For further support, contact [Technical Support](#).