





HRN-GS16K2-HD: 2016 – Present Goupil Industrie G4

Vehicle-specific installation steps for Goupil Industrie G4 with the HRN-GS16K2-HD harness.


Written By: Alkesh Dhak

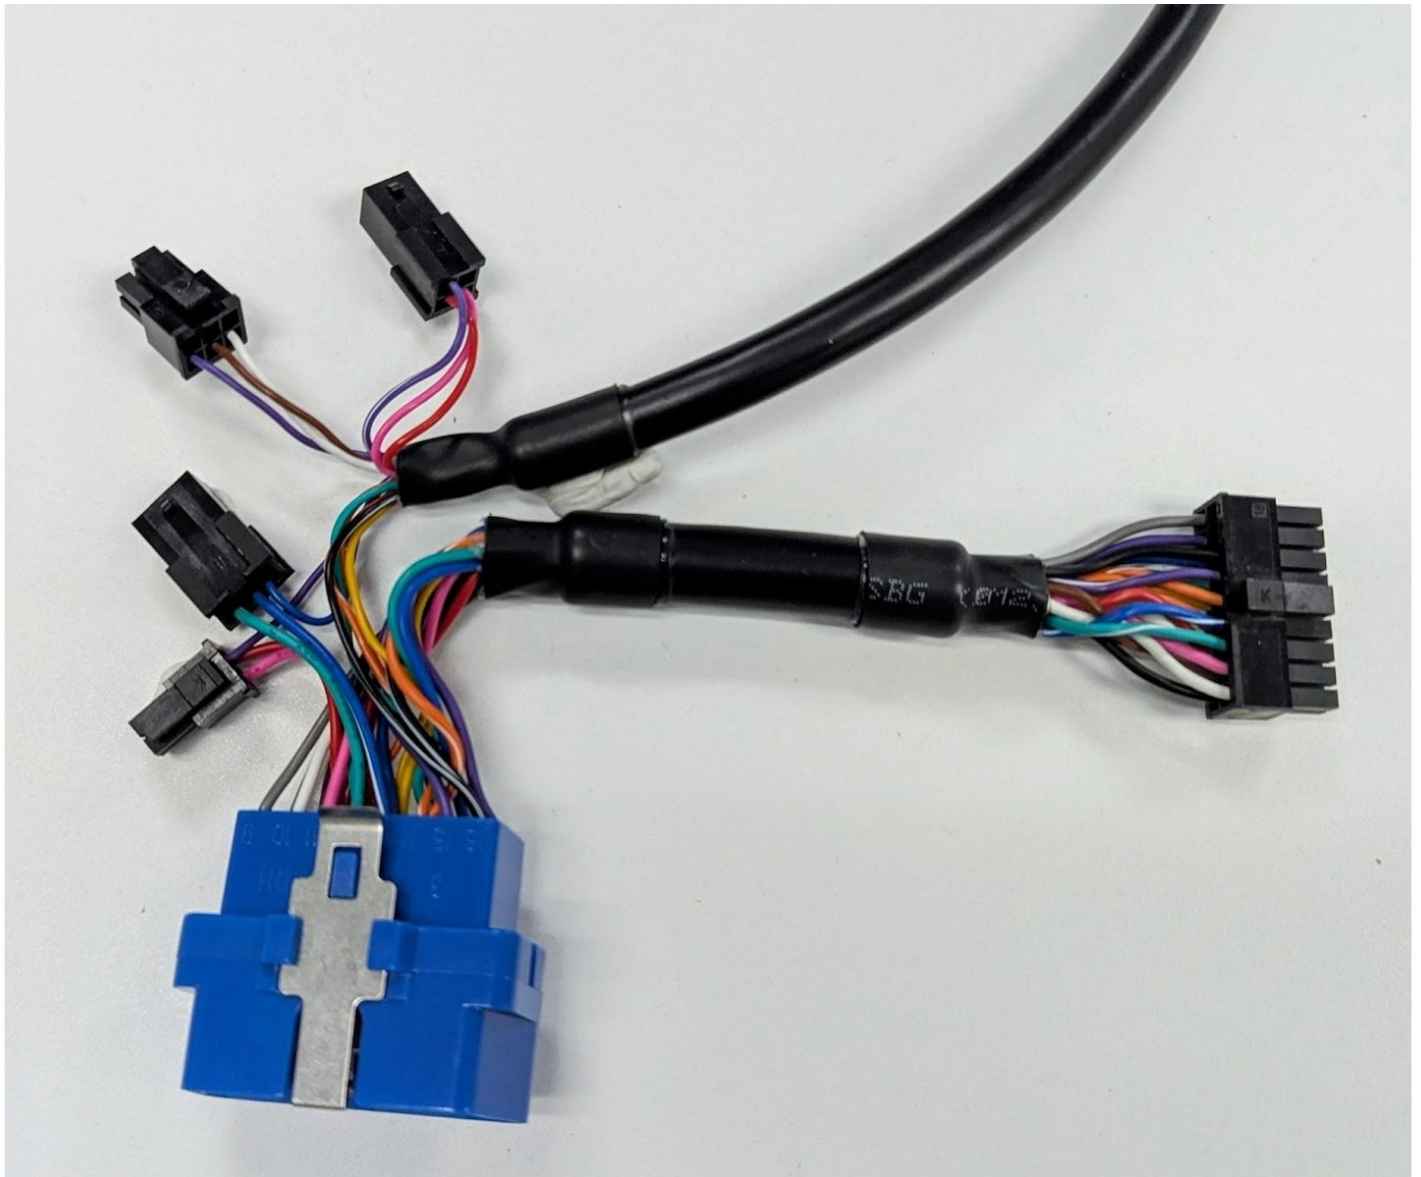


— HRN-GS16K2-HD

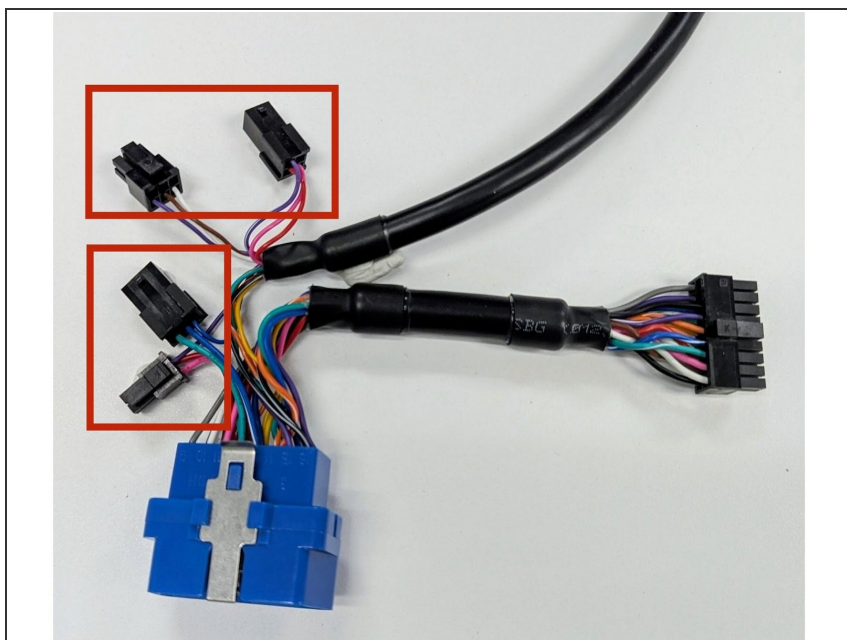

- Prepare the HRN-GS16K2-HD harness.
- Ensure that BOTH small connectors on the harness are unplugged as shown in the image.

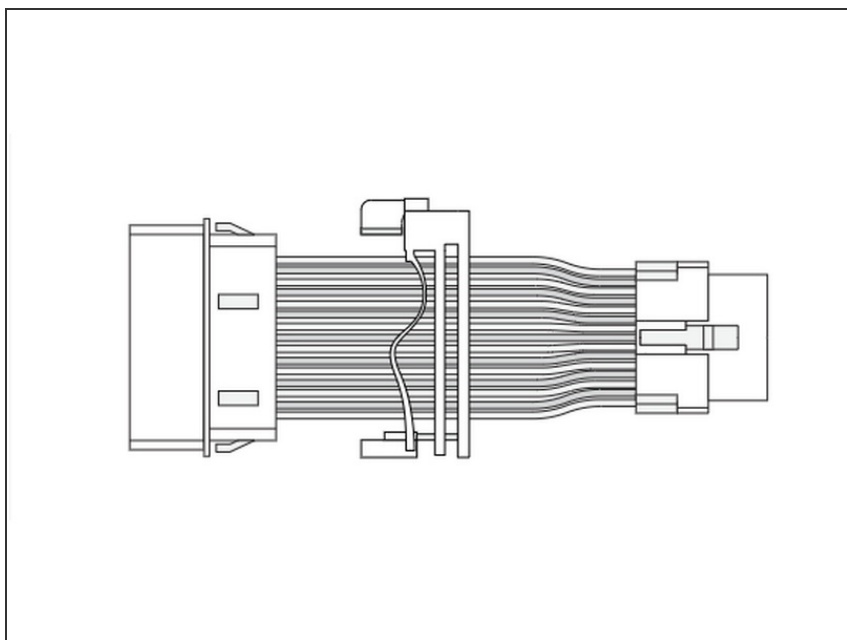

- Select ADAPTOR 7 from the pack, and slide it onto the short harness section, clipping it into place as shown.

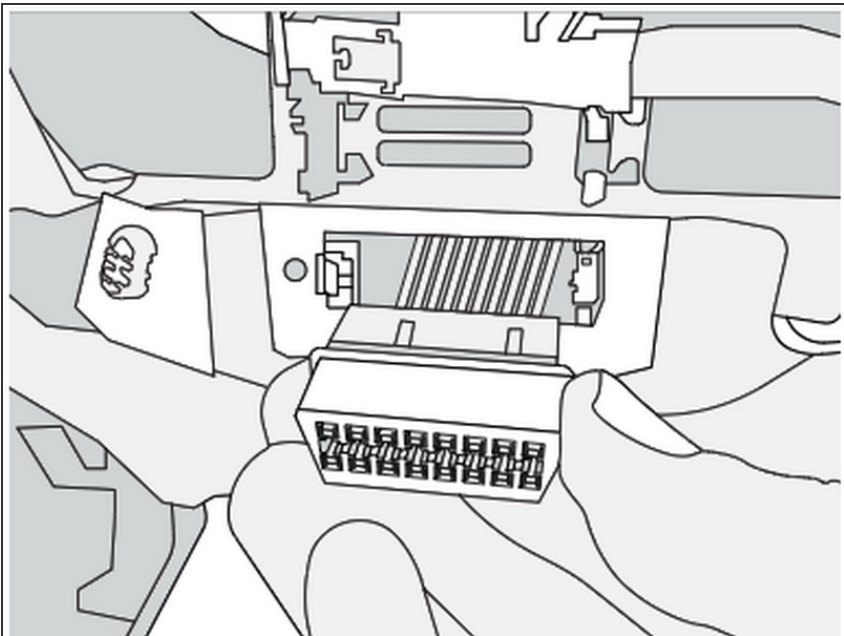

- The factory diagnostic port is located under the driver side dash panel, near the accelerator pedal.
- Clip the short section of the harness into place in the vehicle.



- Clip the short section into place on the main harness.

— Connect the HRN-GS16K2-HD to the factory diagnostic port



- Plug the HRN-GS16K2-HD harness into the vehicles' diagnostic port.

⚠ Secure the connection with a cable tie.



- Route the long end of the harness through the dashboard, to the hole where the speaker is located
- Plug the GO device into the harness, and secure with a cable tie

— GO Device mounting



- Remove the 4 screws holding the speaker in place, and remove the speaker.



- Use at least 2 cable ties to secure the GO device inside the dashboard



- Secure all wiring with cable ties inside the dashboard.
- Replace the speaker and secure it with the 4 screws previously removed.